

mos.lefigibefoxab.www

Mounting the antenna:

There are several places to mount the antenna inside the fairing. See the diagram below for suitable mounting locations.



Inside of Outer Fairing

Connecting the antenna:

The antenna is plugged into the antenna jack on any standard radio. The small black wire is connected to a switched 12V power source. It is recommended you do not use the power antenna lead from the radio. The antenna is grounded through the radio, so a poor ground on the radio could cause poor reception.

Warranty:

The ANT-2000 electronic antenna is warranted from manufacturer defects for the lifetime of the original retail purchaser. Damage to the unit as a result of improper operation or installation is not covered. Liability is limited to the replacement of the defective unit. A return authorization number (RMA#) for products being returned for repair is required. Return products postage prepaid with RMA# and an invoice of your purchase to address listed below.

Order toll free: 1-800-852-3228

Tech line: 605-332-6513 Fax: 605-339-4106

web site: www.dakotadigital.com

Dakota Digital

4510 W. 61st St N. Sioux Falls, SD 57107