

INSTRUCTION SHEET FOR TOOL #972

MAIN DRIVE GEAR SEAL INSTALLER
USE ON ALL 6-SPEED TWIN CAM CRUISE DRIVE TRANSMISSIONS
2006 TO PRESENT FXD & 2007 TO PRESENT FXST'S & FL'S



Use to install the main drive gear oil seal H-D® No.12077 to the proper depth with <u>transmission assembled</u>.

Refer to H-D® Service Manual for specifications.

- 1. Slide the seal protector sleeve over the end of the main shaft. Use transmission oil to lube sleeve and I.D. of seal.
- 2. Install seal with spring facing transmission case.
- Install seal driver and hand press seal into main drive gear. Light tap with a rubber mallet if desired.
 The driver will position seal at proper depth.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOLS! SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

Performance Parts For Harley-Davidson Motorcycles

555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-9224

No.972-IS



7-13

INSTRUCTION SHEET FOR TOOL #972

MAIN DRIVE GEAR SEAL INSTALLER
USE ON ALL 6-SPEED TWIN CAM CRUISE DRIVE TRANSMISSIONS
2006 TO PRESENT FXD & 2007 TO PRESENT FXST'S & FL'S



Use to install the main drive gear oil seal H-D $^{\circ}$ No.12077 to the proper depth with <u>transmission assembled</u>.

Refer to H-D® Service Manual for specifications.

- 1. Slide the seal protector sleeve over the end of the main shaft. Use transmission oil to lube sleeve and I.D. of seal.
- 2. Install seal with spring facing transmission case.
- Install seal driver and hand press seal into main drive gear. Light tap with a rubber mallet if desired.
 The driver will position seal at proper depth.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOLS! SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

Performance Parts For Harley-Davidson Motorcycles