




● Thank you for purchasing our product. This product is a multifunction meter and is easy to install. Before using, please read the instructions carefully and retain them for future reference.

**⚠ Attention!**

- For installation, please follow the steps described. Any damage caused by wrong installation shall be imputed to the users.
- To avoid a short circuit from occurring do not pull or modify the wires during installation.
- Do not disassemble or change any parts. Opening and disassembling this unit will void any warranty.
- Maintenance and repairs should be executed by our professionals only.

Ⓞ Symbol description:

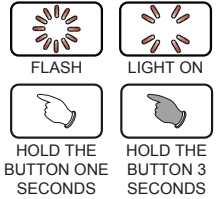

**NOTE**

⚠ Some procedures must be followed to avoid damages to the instrument.

**⚠ WARNING!** Certain procedures must be followed to avoid damages to yourself, to the vehicle or others.


**1 Accessories**

**1** Oil level and temperature dipstick X 1

**2** Inner waterproof O-Ring X 1

**2-1 Basic Function Instruction**


- Low battery warning symbol
- Light on steady
- Engine oil level display
- Display range: 1 ~ 4 level
- Temperature display
- Display range: 0 ~ 150°C (32 ~ 302°F)
- Display unit : 1 °C(°F)
- Low engine oil level warning symbol

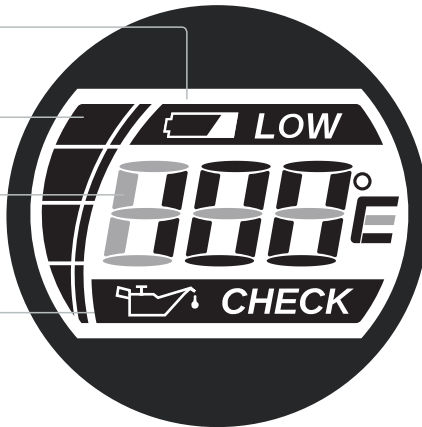

- Thermometer Display range : 0~150°C(32 ~302°F)  
Display unit : 1 °C(°F)
- Oil meter Display range: 1 ~ 4 level
- Low battery warning When low battery warning appears, battery replacement is needed to keep the dipstick accurate.
- Battery specification CR2032
- Effective temperature -10~ +60°C
- Meter standard JIS D 0203(S2)
- Meter size 217x48 mm
- Meter weight 273g

**NOTE** Design and specifications are subject to change without notice.

**2-2 Engine Oil Level Display**

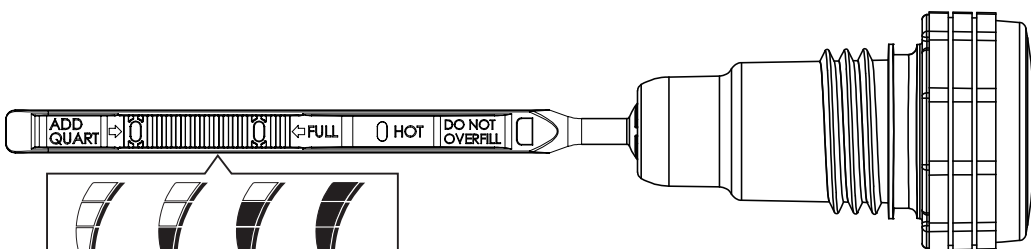


- (The image shows the positive LCD display mode)
- Engine oil level is full
  - Engine oil level is 0.24L from full
  - Engine oil level is 0.47L from full
  - Engine oil level is 0.71L from full



The screen can be moderately changed to adjust your angle. Please keep adjustments to a minimal rotation as it could potentially cause damage to wires on the interior or the head.

**⚠ CAUTION!** Low engine oil level warning symbol appears, please check the engine oil level as soon as possible to refill or replace.

### 3-1 Battery Replacement Instruction

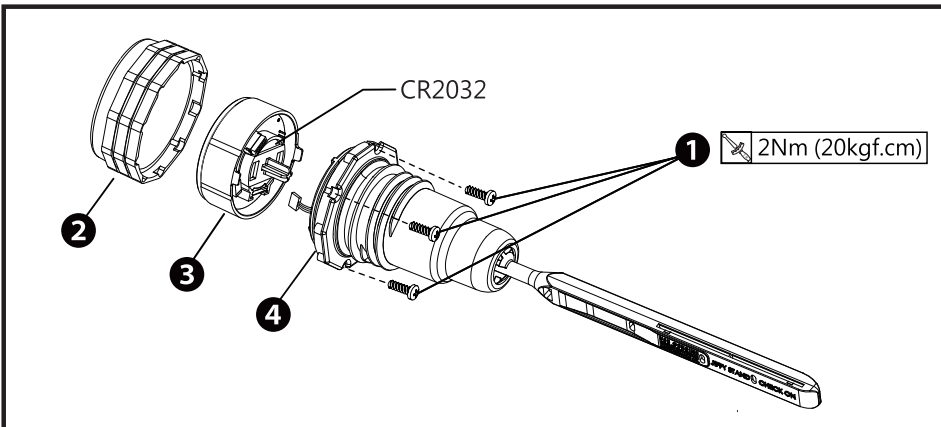

Please, follow the steps below


- ① M2 Socket Head Cap Screws
- ② Aluminum alloy lid
- ③ Display panel and LCD assembly
- ④ Main body assembly

**NOTE** While disassembling ③ & ④. Do not pull the wire, to prevent damage.

**NOTE** Please refer to the diagram to disassemble. And install according to the reverse order of disassembly.

**WARNING!** Do not use high-pressure water stream to wash directly.

### Replacing the Battery

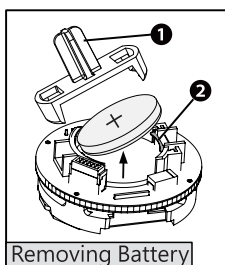


Removing Battery



1. Please follow the steps below to remove the battery (CR2032).

- Step 1. Remove ① the spring bracket.
- Step 2. Use flat head screwdriver push ② shrapnel backwards.
- Step 3. When the tab is loose, remove the battery.

**NOTE** Carefully remove the battery to prevent breaking the tab.

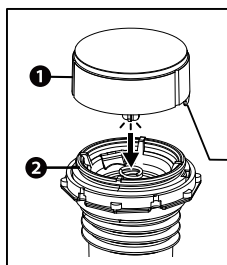

 
3. When fitting ① the LCD mirror surface lid with ② the main body and inner cap, please insert the spring into the bracket and align it with the sticking point for a firm structure.

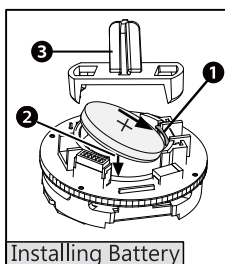

Installing Battery

2. Please follow the steps below to install the battery.

- Step 1. Tilting the battery and place it below ① the tab.
- Step 2. Press the battery downwards to ② the battery space, until the "click" sound appear to settle the battery.
- Step 3. Snap ③ the spring bracket with the battery.

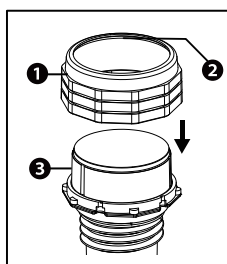

4. Notes for assembling the aluminum alloy lid :  
Step 1. Ensure ② the o-ring is inside ① the aluminum alloy lid is placed at the groove on the front end , confirm ③ the surface and the lid are correctly aligned to prevent displacement of the o-ring, then press and fix the lid onto the main body.

Step 2 . To ensure that the previous step is done properly, wait for a few seconds for the standby mode. When the LCD is off, fasten the inner hexagonal screw. You have now successfully replaced the battery.

### 3-2 Battery Replacement Instruction




When low battery warning sy.bol appears, battery replacement is needed immediately.

**NOTE** Please refer to the replacing battery instruction above.

**NOTE** The warning symbol is illuminated.

### 3-3 Temperature Unit Switching Instruction

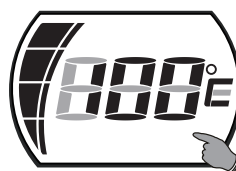

● Press and hold the main screen for 3 seconds to change the temperature unit.



● The low battery warning symbols will disappear after battery replacement.



### 4 Trouble shooting

The following situation do not indicate malfunction of the meter. Please check the following points, before contacting us.

Trouble	Check item
The meter does not display properly.	<ul style="list-style-type: none"> <li>● Maybe the wire is not correctly connected, →Please check if the wire is correctly connected.</li> <li>● Maybe the problem is caused due to insufficient power. →Please change the internal battery.</li> <li>● Maybe the problem is caused by incorrect battery installation. →Please check is the battery direction is correct.</li> </ul>
Engine oil display error.	<ul style="list-style-type: none"> <li>● Wrong bike model of motorcycle. →Please check if the bike fits the dipstick.</li> <li>● Incorrect reading caused by vibration. →Due to engine vibration after starting, it can cause the oil surface to jump. Thus the oil level may be incorrect.</li> </ul>

※If the problems still can't be solved, please contact our technical department.