



IMPORTANT NOTICE

Before installing this TPMS sensor relocation bracket, read through these instructions completely, this will familiarize you with the way in which the parts fit together and the tools needed to complete the job.

The TPMS sensor relocation bracket involves alterations to your motorcycle and may void your factory warranty. PM STRONGLY recommends this installation be done by an experienced motorcycle mechanic.

DISCLAIMER

These Performance Machine parts are designed for high performance motorcycle applications and are intended for the very experienced rider only. The installation of these Performance Machine parts may adversely effect or void your factory warranty.

If you have received your wheel with a pre mounted TPMS relocation bracket please skip to step 4.

1. Install the TPMS sensor relocation bracket using the supplied hardware.
2. Sandwich the large O-ring between the bracket and wheel.
3. Torque the valve stem nut to 20 in-lbs.



PERFORMANCE MACHINE LIMITED WARRANTY INFORMATION

Performance Machine warrants to the original purchaser that the parts of this TPMS sensor relocation bracket to be free of manufacturing defects in materials and workmanship for a period of one (1) year from the date of purchase. In the event warranty service is required, you must call Performance Machine immediately with a description of the problem.

If it is deemed necessary for Performance Machine to make an evaluation to determine whether the part is defective, a return authorization number will be given by Performance Machine. The parts must be packaged properly so as to not cause further damage and returned prepaid to Performance Machine with a copy of the original invoice of purchase and a detailed letter outlining the nature of the problem. If after evaluation by Performance Machine the part was found to be defective it will be repaired or replaced at no cost to you. If we replace it, we may replace it with a reconditioned one of the same design.

Performance Machine shall not be held liable for any consequential or incidental damages resulting from the failure of a Performance Machine part.

Performance Machine shall have no obligation if a part becomes defective as a result of improper installation or abuse.



4. Remove the stock TPMS sensors by removing the tires and unbolting them from the stock wheels.
5. Mount the TPMS sensor to the relocation bracket using the supplied flange nut and spacer.
6. Be sure to align everything as center and straight as possible. Then torque to 31 in-lbs.

7. Mount the tire, inflate to the manufactures suggested PSI and test the TPMS function.