

## Custom Dynamics® Mounting Block for 5.75" Softail Headlight Bucket Installation Instructions

We thank you for purchasing the Custom Dynamics® Mounting Block for 5.75" Softail Headlight Bucket. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: 18ST-HL-MOUNT

## **Package Contents:**

-Headlight Mounting Block

Fits: 2018-2024 Harley-Davidson® Softail Street Bob (FXBB/FXBBS), 2018-2020 Low Rider (FXLR) and 2020-2024 Softail Standard (FXST).

Recommended for use with Custom Dynamics® 5.75" Headlamp Bucket PN 2001-2599 (sold separately).



## **ATTENTION**



Please read all Information below before Installation


<u>Warning</u>: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.



## Installation:

- Refer to the factory service manual and remove the OEM headlight assembly and headlight mount from the lower triple tree.
- 2. Using the existing 5/16"-18 X 1-3/4" UNC Hex Socket Head OEM mounting bolt, mount the new 18ST-HL-MOUNT to the lower triple tree. The 18ST-HL-MOUNT should be installed with the flat side facing the front of the motorcycle to maintain the OEM headlight position. See Photo 1.

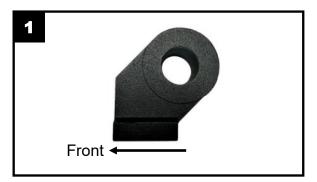

**Note:** The 18ST-HL-MOUNT can be mounted in the opposite direction to extend the headlight forward 1-3/8" if needed for your application.

3. Install the new headlight bucket to the mount. Refer to the instructions with the headlight bucket.