




OEM Tombstone Tail Light Installation Instructions

We thank you for purchasing the Custom Dynamics® OEM Tombstone Tail Light. Our products utilize the latest technology and highest quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support. If you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: GEN-56-1157

Package Contents:

- OEM Tombstone 1157 Tail Light

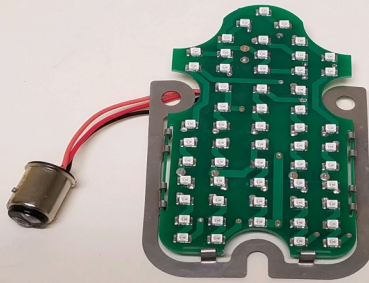

Fits: All Harley-Davidson® Models with OEM Tombstone Taillight

Including 1997-2003 Softail Heritage Springer/Classic, 2005-2014 Softail Deluxe and Softail Deluxe CVO™



ATTENTION



Please read all Information below before Installation

Warning: Disconnect the negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Make sure the bike is parked on a level surface and bike's mechanical components are cool to the touch.

Cleaning: Take special care in cleaning the finish. Use only a non-abrasive cleaner and a fine microfiber cloth to remove dirt or debris. Never use abrasive polishes or cleaners as these can scratch the finish.

Installation:

1. Remove 3 screws from stock lens and remove lens and housing. On some models the license plate mount will also have to be removed.
2. Remove OEM bulb from socket.
3. Be sure socket is clean.
4. Insert 1157 base into OEM socket and twist so that base is fully seated.
5. Reinstall lens and housing assembly. Reinstall license plate mount if removed.
6. Tighten all three screws.
7. Test operation of running light and brake light modes before riding.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST