



Custom Dynamics® High Mount Tour-Pak LED Light Installation Instructions

We thank you for purchasing the Custom Dynamics® High Mount Tour-Pak LED Light. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-TP-LID-BS CD-TP-LID-BR
CD-TP-LID-CS CD-TP-LID-CR

Package Contents:

- Tour-Pak LED Light (1)
- BCM Y Harness Adapter (1)
- Isopropyl Alcohol Wipe (1)
- 6" Tie Wraps (6)
- Tie Wrap Holder (2)
- Wire Keepers (4)

Fits: 2014-2020 Electra Glide®, Ultra, Road Glide® Ultra, Limited and Tri Glide® models (including CVO™) with stock LED Tour-Pak®, 2014-2020 King Tour-Pak® and Chopped Accessory Tour-Pak®.

Note: Confirm stock Tour-Pak® corner lights function as run/brake/turn before purchasing. Typically operates as run/turn on 2014-2015 CVO™ Limited and 2015 CVO™ Road Glide Ultra.



Installation:

1. Secure motorcycle on level surface. Remove seat. Disconnect negative battery cable from the battery.
2. On all models except Tri Glide® models, locate and unplug the lighting connector to the rear fender. On Tri Glide® Models locate and unplug the Tour-Pak® lighting connector.
3. On all models except Tri Glide® models, plug the provided BCM Y Harness Adapter, in-line, into the rear lighting harness and into the bike's main wiring harness. On all Tri Glide® models, plug the provided BCM Y Harness Adapter, in-line, into the Tour-Pak® lighting harness.
4. Remove the passenger backrest from the Tour-Pak by removing the 3 securing nuts on the inside of the Tour-Pak lid. Save the hardware as it will be used for reassembly.
5. Clean the surface area where the Tour-Pak High Mount LED Light will be installed on top of the Tour-Pak lid; remove any grease, wax or debris. Wipe the surface area with the provided isopropyl alcohol wipe and allow to dry.
6. Connect the Tour-Pak High Mount LED Light to the BCM Y Harness Adapter and reconnect the negative battery cable to the battery.
7. Perform a BCM sync by turning the ignition on, turn the 4 way hazards on, turn the ignition off. Allow the 4 way hazards to run for 3-4 minutes. Turn the ignition on. Turn the 4 way hazards off. Turn the ignition off. Test for proper operation.
8. Test fit the Tour-Pak High Mount LED Light on the Tour-Pak lid, use a grease pencil to make any alignment marks.



ATTENTION


Please read all information below before installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

Important: Ambient install temperature must be 60 degrees F or higher. Allow 24 hours for tape to cure before washing or prolonged use of vehicle.

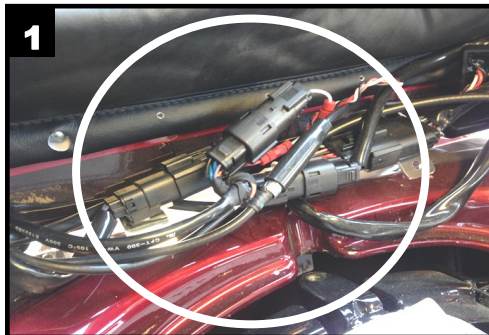


Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2.

Installation:

9. Remove the red protective film of the 3M™ tape from the back of the Tour-Pak High Mount LED Light. Firmly press the Tour-Pak High Mount LED Light into place using the grease pencil marks in Step 7 as your guide. Apply pressure evenly over the Tour-Pak High Mount LED Light for one minute to ensure the tape is applied evenly.
10. Route the wire from the Tour-Pak High Mount LED Light down the front of the Tour-Pak Lid using the provided wire keepers and tie wrap holders as shown in Photo's 2 and 3. Secure the wire so it will not be pinched or damaged behind the passengers backrest when installed. Be sure to leave slack in the wire to allow the TOUR-Pak lid to fully open as shown in Photo 4.
11. Continue routing the wire towards the BCM Y Harness. Secure the wire so it will not be pinched or damaged under the seat when installed.
12. Reinstall the seat and the passengers backrest.
13. Test all lighting for proper operation in run, brake and turn mode before riding.

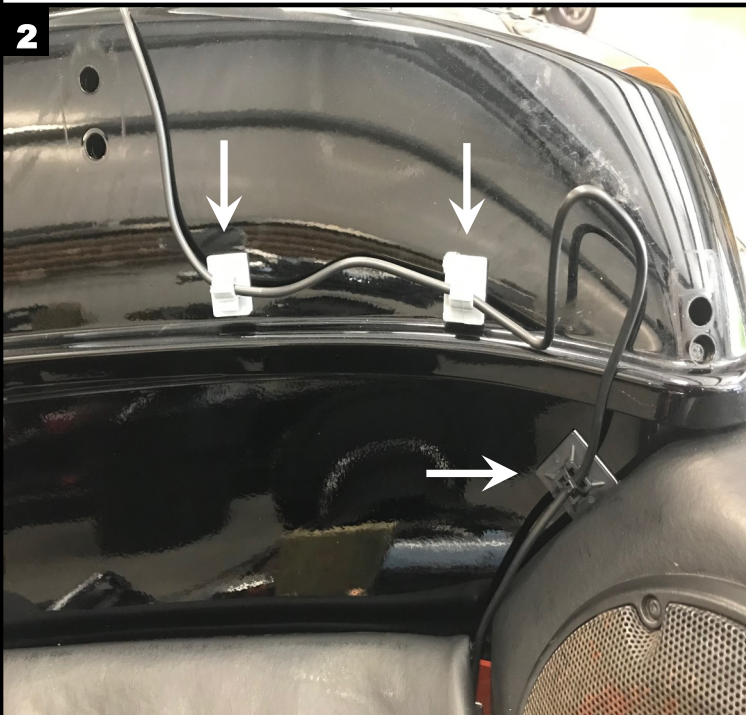

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST