



Custom Dynamics® FXLRST Integrated Taillight Adapter Installation Instructions

We thank you for purchasing the Custom Dynamics® FXLRST Integrated Taillight Adapter. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: TL-LRST-INT

Package Contents:

- Integrated LRST Taillight Turn Signal Adapter (1)
- LRST Taillight Adapter (1)

Fits: 2022-2024 Harley-Davidson® Low Rider ST (FXLRST) & 2022 Low Rider EI Diablo (FXRST)

Compatible with Custom Dynamics® Integrated taillights with Auxiliary Turn Signals.





ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.


Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Integrated LRST Taillight Turn Signal Adapter Connector Legend

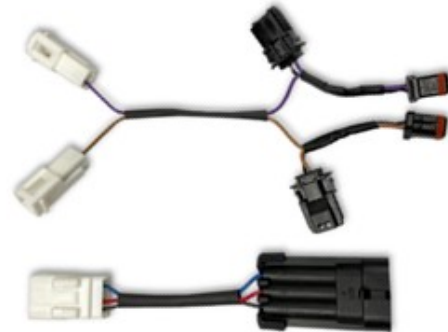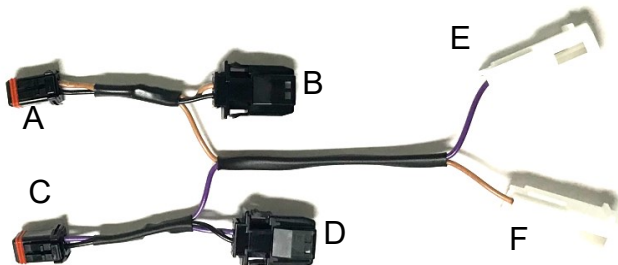

Installation:

1. Remove the taillight, locate and unplug the Left and Right Turn Signal Connectors, see Photo 1.

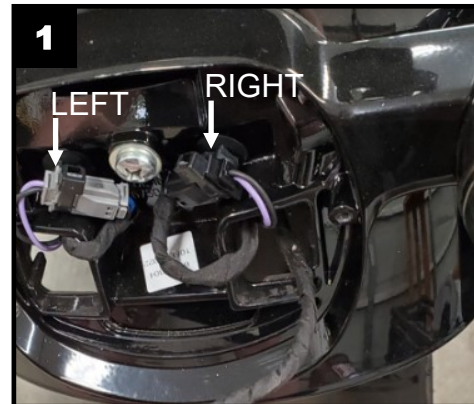

2. Connect the Integrated LRST Taillight Turn Signal Adapter to the taillight and the bike's turn signal connectors. Refer to the Integrated LRST Taillight Turn Signal Adapter Connector Legend. Plug Connectors A & B (with Brown Wire) into the Black Right Turn Signal connectors on the bike. Plug Connectors C & D (with Purple Wire) into the Grey Left Turn Signal connectors on the bike.

NOTE: if the OEM turn signals have been removed, Connectors A & C will not be plugged into anything.

3. Plug Connectors E & F into the integrated taillight matching the wire colors. Connector E (Purple Wire), Connector F (Brown Wire)
4. Install the LRST Taillight Adapter between the taillight and the bike's taillight connector.
5. Install taillight to the taillight base.
6. Test the operation of all lighting before riding.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST