




CIRO FILLER PANEL LIGHTS

Parts Included:

- 1 Right Side Light Assembly
- 1 Left Side Light Assembly
- 1 Hardware Kit Including:
 - 12 1/4" Flat washers
 - 4 1/4-20 x 3/4" Bolts
 - 4 1/4-20 Locknuts
 - 1 Dielectric grease packet
 - 1 Run/Turn/Brake Splitter Harness
 - 6 6" Cable ties

Installation Instructions:

1. Park on a level surface and shut off the bike. Ensure that the engine has had time to cool before installation.
2. Remove your saddlebags by turning the two fasteners inside counter-clockwise. Lay your bags on a soft surface, out of the way.
3. Identify which **Ciro Filler Panel Light** goes to which side by looking at the back.
4. Insert the wire from the light through the large chrome oval opening.
5. Place the light housing in the large opening with the tabs on the inside surface. Align the holes of the light housing with those of the oval.
6. Insert a 1/4-20 x 3/4" bolt and washer through the aligned holes from the outside. Fasten on the other side with a washer and 1/4-20 locknut. Repeat this for both holes on each side. **Do not over-tighten**

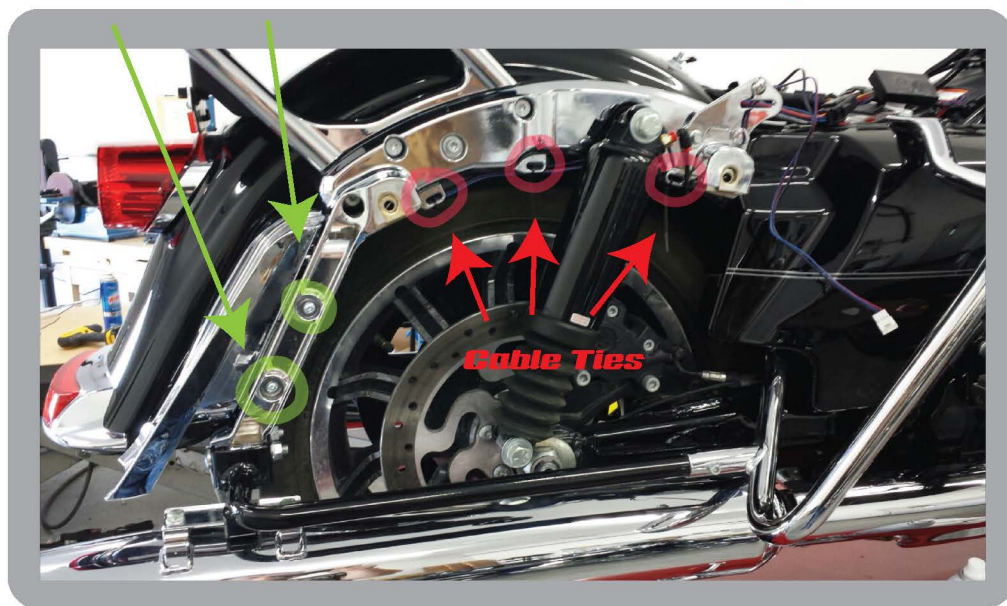

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All **Ciro** products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.


NOTE:

Ciro products are designed and manufactured under very strict quality control. **Ciro** warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. **Ciro** will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. **Ciro** will not be liable for any consequential and incidental damages, including labor, or non-**Ciro** products. Please visit our website Ciro3d.com for our complete warranty policy.

CIRO3D.COM

7. Route the wire up along the top of the outer edge of the fender and secure it with cable ties as shown in the previous image. When you get to the air line, follow it to get the wire into the space under the seat.

8. Locate the black lighting connector at the rear of the under-seat area. Disconnect this and plug the Ciro Run/Turn/Broke splitter harness in-line with it.

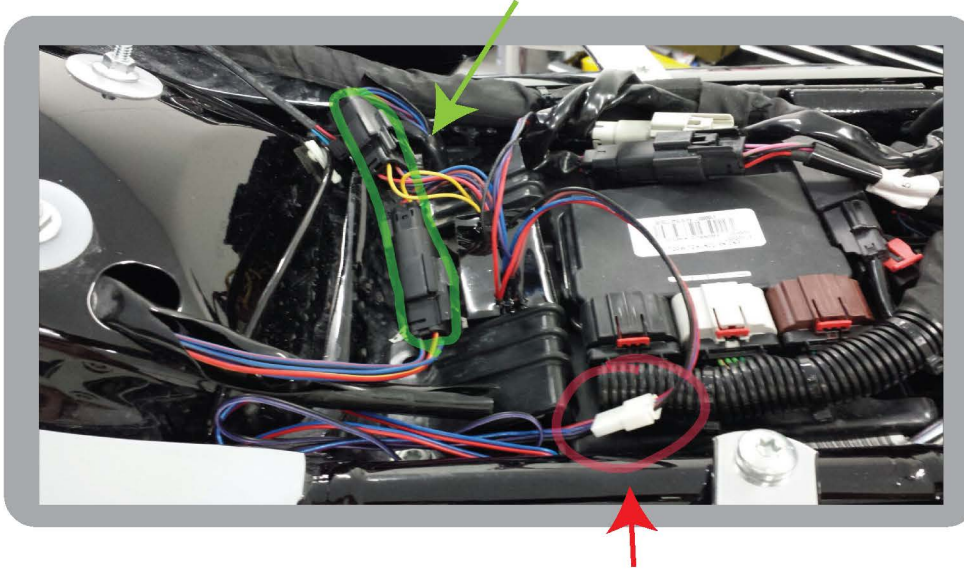

9. Plug the wires coming from the rear filler lights into the wires coming from the splitter harness. The brown should be on the right, and the violet on the left.

10. Turn the bike on to accessory power and verify that all lighting is functioning as expected.

11. Re-install your saddlebags and observe the angle at which the lights are sitting. If clearance is an issue anywhere, use the included extra washers to shim the lights at their mounting point.