



RYDECULTURE

BRYANT M1 BAG LIGHTS



BOX INVENTORY

- **LEFT AND RIGHT LIGHT ASSEMBLY**
- **8 ZIP TIES**
- **8 ZIP TIE BRACKETS**
- **1 WIRING HARNESS**

Safety:

- Ensure that the motorcycle is in a safe area to work in
- Dealing with electrical, it may be a good idea to disconnect the battery

Considerations:

- Ensure that any wax, ceramic coat, and other chemicals are cleaned from the saddle bag where the surface will mate with the adhesive on the rear of the taillight. RydeCulture can't possibly predict what you personally use to clean and maintain your saddle bags. Please see the cleaning instructions from the manufacturer of your specific products ensure the best results for prepping the mating surface.
- The Bryant M1 Lights fit multiple models and designed for the newer square style bag. Some of the instructions may not be exact to your specific Indian Motorcycle. Seat removal and other accessory removal are not covered in these directions. Please see your owner's manual for seat removal and other instructions to properly access the required areas in order to install the Bryant M1 Lights
- Do not attempt installation in temperatures under 50 degrees.

Installation:

1. **Clean and prep the mating surface on the saddle bag**
2. Remove the seat of your motorcycle to access the battery and wiring harness that control the rear taillights.
* It is recommended that the battery is disconnected for most electrical in stalls.




RYDECULTURE

BRYANT M1 BAG LIGHTS



3. Unplug the wiring harness that controls the rear taillights.

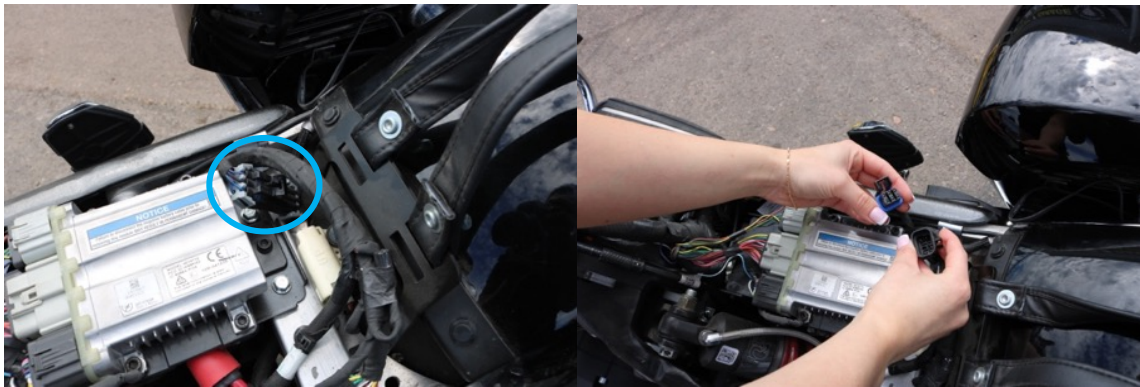

4. Let's all admit to the fact that the new style bags on Indian Motorcycles don't have the best fitment sometimes. It is a good idea to do an initial test fitment of the lights on the saddlebag. With the bag closed, align the Bryant M1 lights to bottom of the saddlebag lid and press down with a little force. This will place the light on the correct position for installation and prevent excessive contact to the saddlebag lid. Ensure you mark and record where you want the lights to sit within respect to the bag lid.



RYDECULTURE

BRYANT M1 BAG LIGHTS



5. Install the lights by removing the adhesive protection strips. Be careful! Once these lights are placed and pressed on, it will take an act of congress to make adjustments to the light.





BRYANT M1 BAG LIGHTS

RYDECULTURE

6. Plug in the wiring harness.



7. Route the wires from the wiring harness. The wires are long enough to enable you to route the ends through to the other accessory plug area on the frame of the bike on either side. This makes it so that you can quickly disconnect the lights if you're taking the saddlebags off.



8. Route wires to the back of each saddle bag and secure with zip ties and brackets provided in the package. Ensure that you leave enough space between the bag lid and the mounting of the zip tie brackets.