



GEN 2 BIG ASS® DRINK HOLDER

- WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.
- CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.
- ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Ciro3d.com for our complete warranty policy.

Included Items



Fig.1




Installation Instructions:

1. Park motorcycle on a level surface and ensure the engine has time to cool before beginning installation.
2. Remove collet nut from drink holder and place on ball mount with threads oriented out. Fig. 1
3. Position drink holder at ball mount and push onto mount and tighten collet nut onto threads.

ATTENTION To reposition drink holder, always loosen collet nut, move drink holder, then tighten nut securely.

NOTE: For best performance and safety, adhere to recommended height and weight of products placed in drink holder. Fig. 2

Fig.2

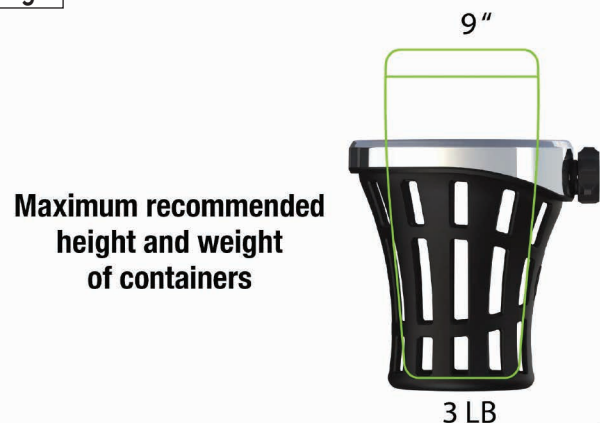



GEN 2 BAR CLAMP MOUNT

- WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.
- CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.
- ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Ciro3d.com for our complete warranty policy.

Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation.
2. Determine the ideal location for the device you are mounting with the Ciro Clamp Mount.

NOTE: Avoid tubing bends. Place the clamp on straight sections only. Tightening this clamp onto a bar might mark the surface finish.

3. Assemble the clamp halves around the bar and insert the 1/4-20 screw through both halves. Thread the ball post onto the screw. Align the flat spot toward the hinge of the clamp.
 4. Tighten the assembly "finger tight" and fine tune the position.
 5. Finally tighten the assembly onto the bar using a 3/16" hex key in the screw and another 3/16" hex key in the ball stud.
- Tighten the screw until the clamp is tight. DO NOT OVERTIGHTEN. This clamp will hold securely with minimal screw torque.
- ATTENTION: There will be a small gap between the clamp halves when it is properly installed.
- ATTENTION: Torque must not exceed 48 in-lbs (4 ft-lb)

NOTE: If you have purchased a Ciro accessory to go with your Clamp Mount, please refer to those instructions to complete your installation.

Included Items:

