



## GEN 2 BIG ASS<sup>®</sup> DRINK HOLDER

- WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.
- CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.
- ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

### Included Items




### Installation Instructions:

1. Park motorcycle on a level surface and ensure the engine has time to cool before beginning installation.
2. Remove collet nut from drink holder and place on ball mount with threads oriented out. Fig. 1
3. Position drink holder at ball mount and push onto mount and tighten collet nut onto threads.

**ATTENTION** To reposition drink holder, always loosen collet nut, move drink holder, then tighten nut securely.

NOTE: For best performance and safety, adhere to recommended height and weight of products placed in drink holder. Fig. 2

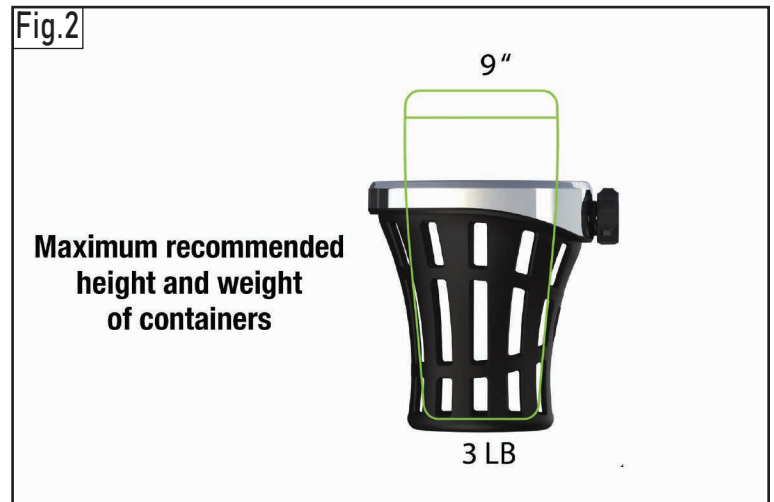



## GEN 2 ACCESSORY PERCH MOUNT

- WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.
- CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.
- ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Giro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Giro products are designed and manufactured under very strict quality control. Giro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Giro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Giro will not be liable for any consequential and incidental damages, including labor, or non-Giro products. Please visit [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.


### Included Items:

- 1 Perch Mount Cap
- 1 #10-24 x 1/2" SHCS
- 1 Lock Washer
- 1 Perch Mount Base
- 2 M6 SHCS
- 2 Spacers



### Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation. Cover your tank with a clean towel or blanket to protect it.
2. This mount can be used on either the left or right side of most handlebars, with the ball above or below the hand controls. Note: some motorcycles may not allow all positions. Determine desired location before beginning. Remove the plastic cap covering the screws using fingernail or screwdriver. Fig. 1 Then remove the two screws holding the clamp half in place. Carefully support the original clamp half and controls to prevent any accidental damage. Fig. 1
3. Prepare the perch mount assembly using two supplied M6 screws and two spacers as shown. Fig. 2
4. Install the perch mount with spacers to the motorcycle, making sure to keep the original clamp half in place. Tighten to factory specifications; approximately 90-108 inch-lbs (12 N-m). Fig. 3
5. Install the perch cap to the mount with the included screw and lock washer. The position of the perch cap can be adjusted to provide adequate clearance for any installed accessory. Tighten to approximately 18-22 in-lbs (2-2.5 N-m). Fig. 4

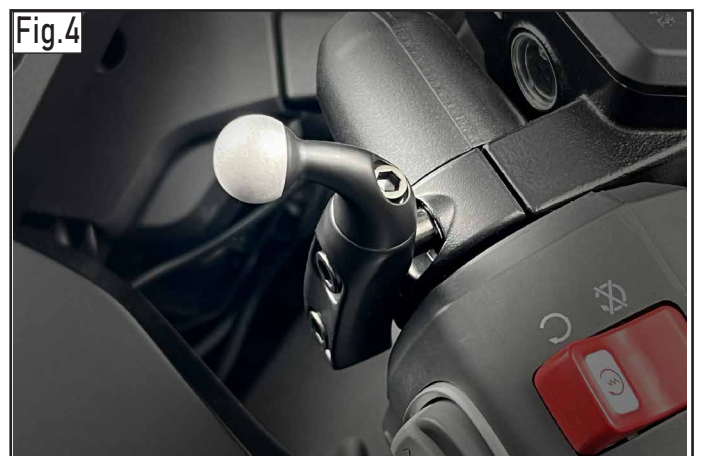

**Note:** Check accessory instructions for additional mounting details. We recommend periodically checking the tightness of all fasteners before riding. Adjustments may be made by carefully loosening hardware (including plastic collet nut) before moving items. Make sure to fully tighten everything before use. We recommend the use of a medium strength thread locker on screws.