



## BOLT CAPS

### Parts Included:


- 37 1/4" Bolt Caps
- 16 5/16" Bolt Caps

### Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Ensure that the engine has had time to cool before installation.
2. Locate bolt size and location as pictured below.
3. Firmly press cap onto bolt until there is no gap. Repeat on all desired bolt locations.

**Note:** Bolt cap placement on a Harley-Davidson Softail is very similar.

○ 5/16" Cap   ● 1/4" Cap

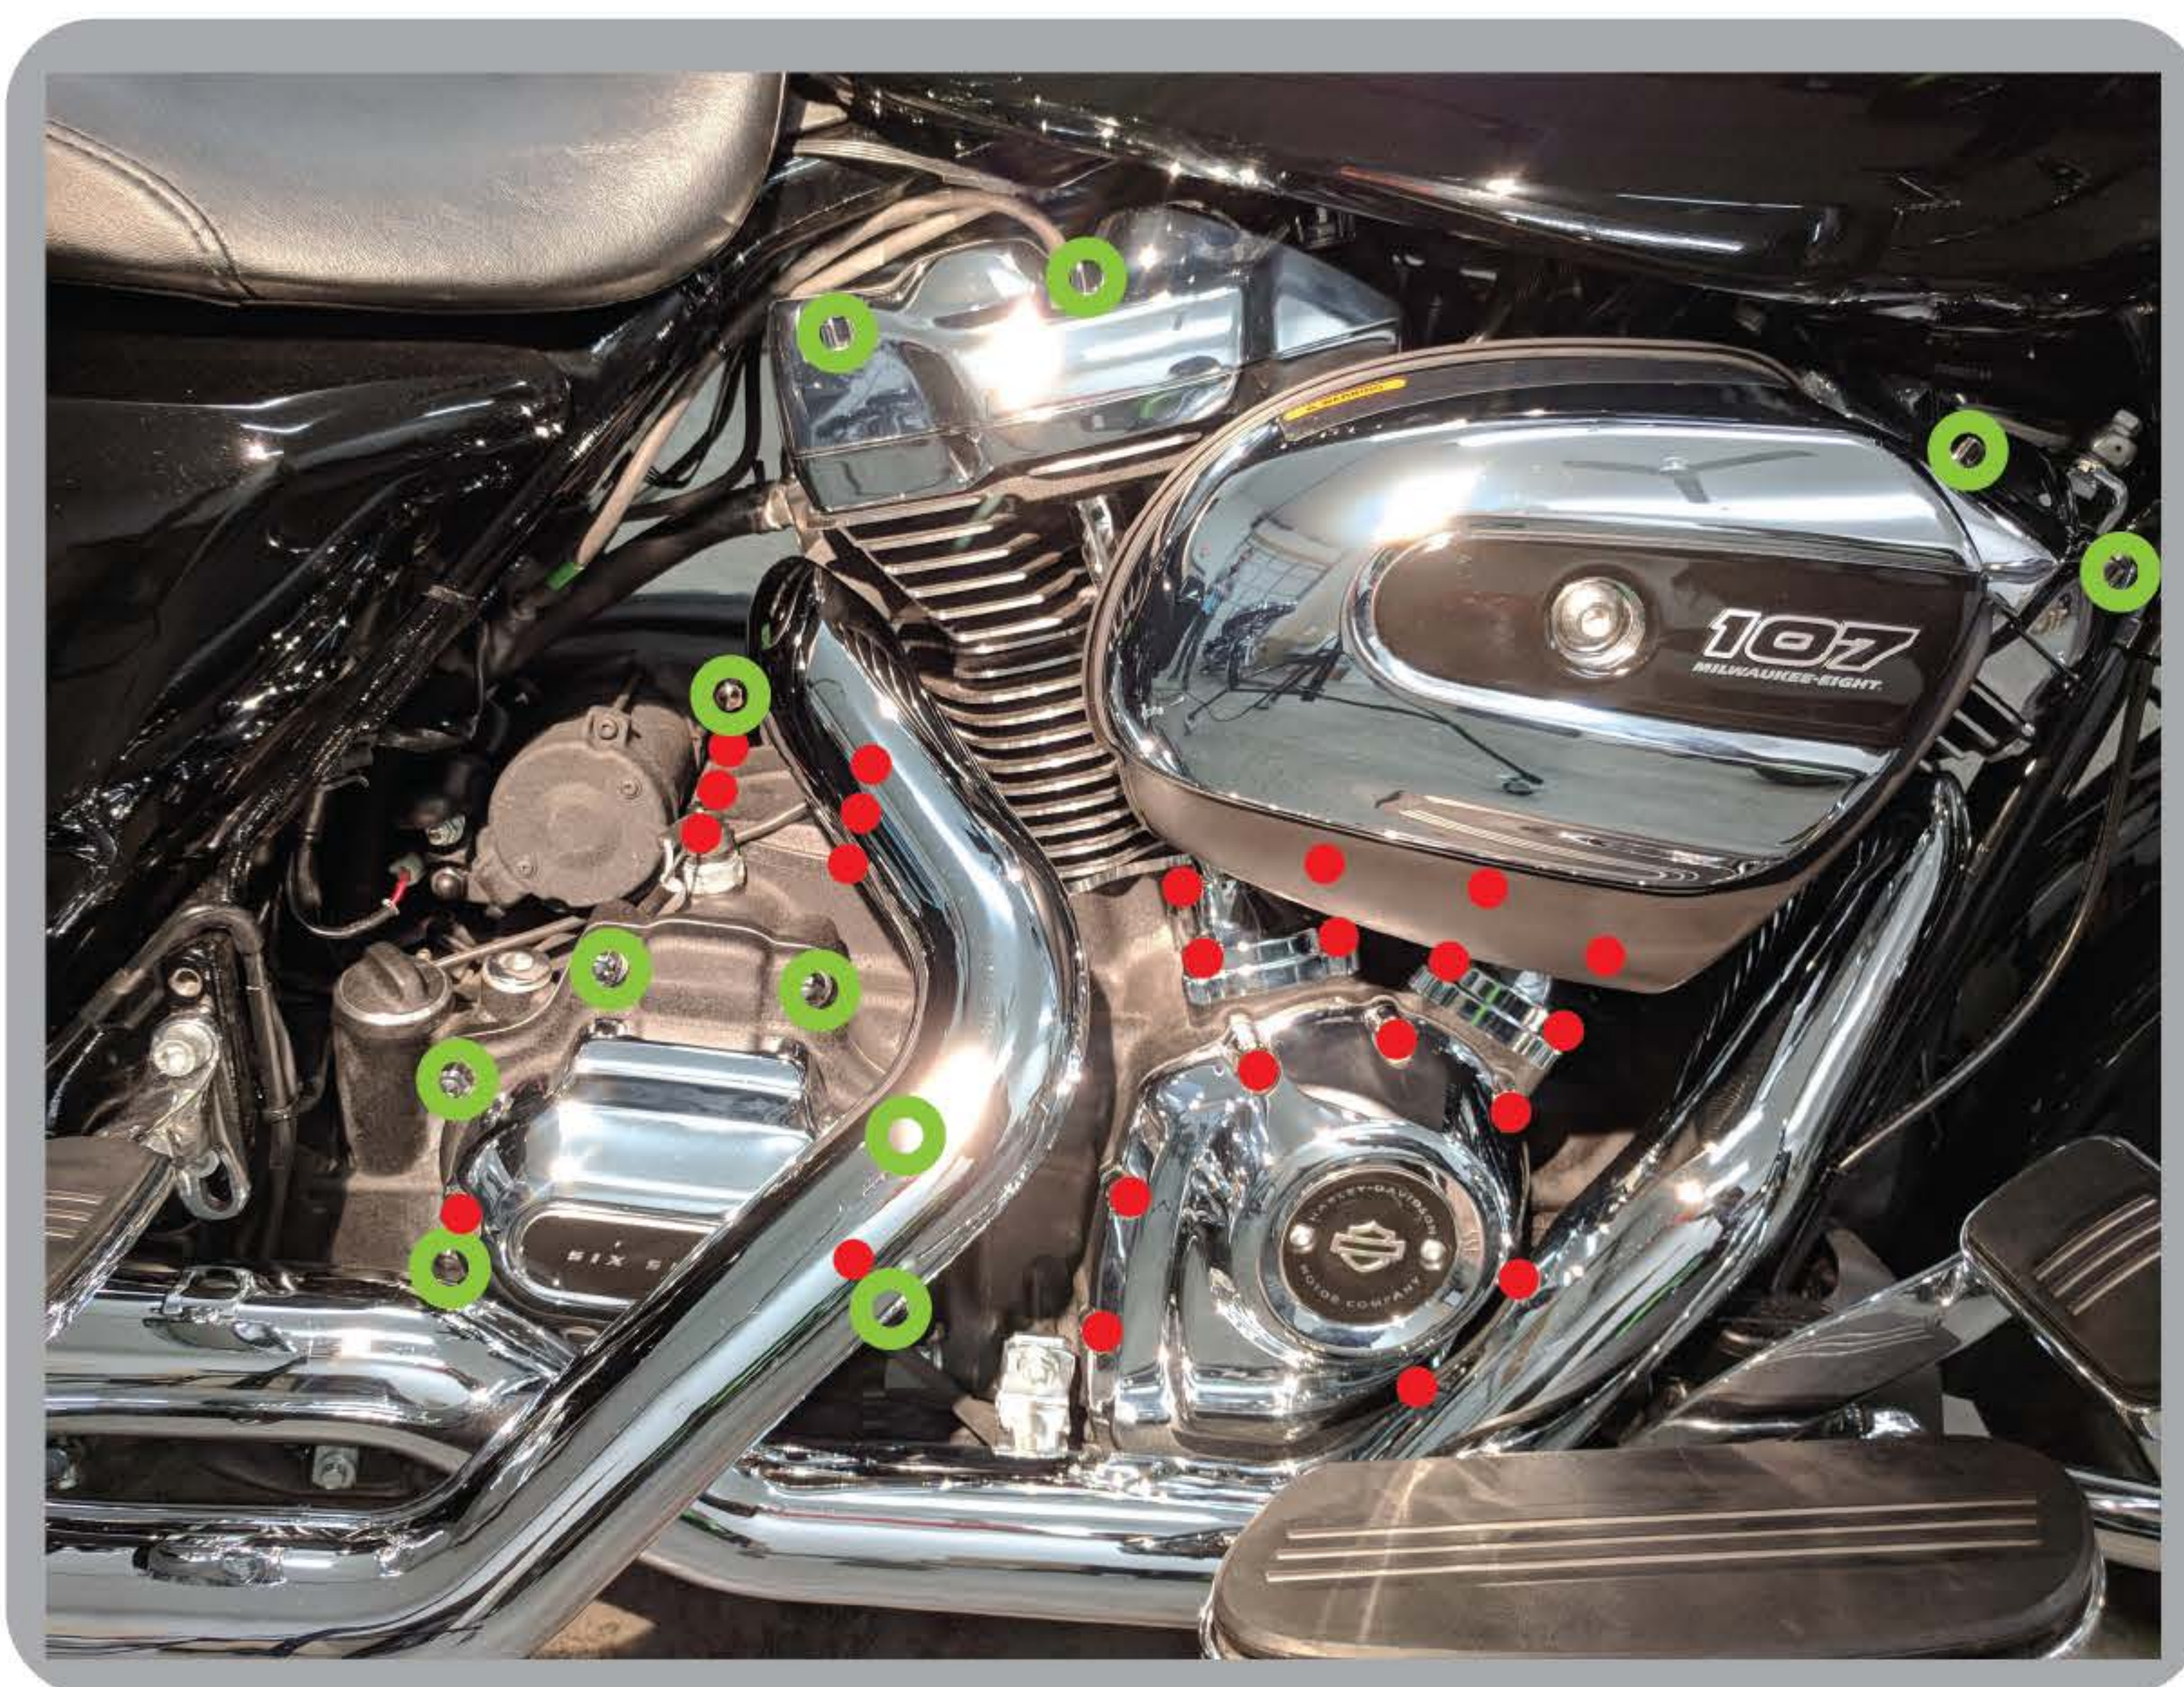

### WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

### CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

### ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Giro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

### NOTE:

Giro products are designed and manufactured under very strict quality control. Giro products are warranted to be free of defects in material and workmanship for 1 (one) year from date of purchase by the consumer.

Giro will have no obligation if the customer cannot show proof of purchase.

Warranty will not be granted unless the part is properly installed and maintained.

Giro will not be liable for any consequential and incidental damages, including labor, or non-Giro products.

Please visit our website [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

**CIRO3D.COM**