



Low Profile Laydown License Plate Mount

Made in The USA

DK Custom Products

(Please read all instructions before beginning install)

Parts included:

- 1- License Plate Mount
- 1- Spacer
- 1- Neoprene Isolator Pad
- 7- ¼-20 nut/lock washer sets
- 11- ¼" Flat washers
- 4- ¼-20 x ⅜" Button head cap screws

Instructions:

1. This Low Profile Laydown Curved License Plate Mounting Kit is designed to use on any Harley Fender that has a 3 hole bolt pattern for the OEM License Plate bracket. (see illustration below) It can also be used on other fenders, after drilling the three holes for the mounting studs.
2. Remove your factory license plate bracket from the fender.
3. Place the included metal spacer onto the new License Plate Mount, followed by the Neoprene Isolator Pad. Then place the three studs, protruding from your new License Plate Mount, through the three holes on your fender.
4. Reaching up under the fender, place a flat washer, then a lock washer, then a nut onto each of the studs. It is strongly recommended to use blue threadlocker in addition to the included lock washers. Once all 3 bolts are hand tight, go ahead and torque them to 12-15 ft. lbs.
5. Attach your license plate to your new mount, using the hardware we provided, or other hardware of your choice. You may also choose to use a license plate frame.


Note: Should you desire to use a frame, you do Not need to get a curved frame. We have found that a flat frame can easily be tightened down to follow the curve of the License Plate Mount.

6. Go for a ride!

Important Notes:

- The riders safety and product warranty depends on the correct installation of this bracket. Please do not attempt if you have any doubts of your ability to install.
- We **STRONGLY** recommend using blue (medium) thread locker on all threads.

Illustration

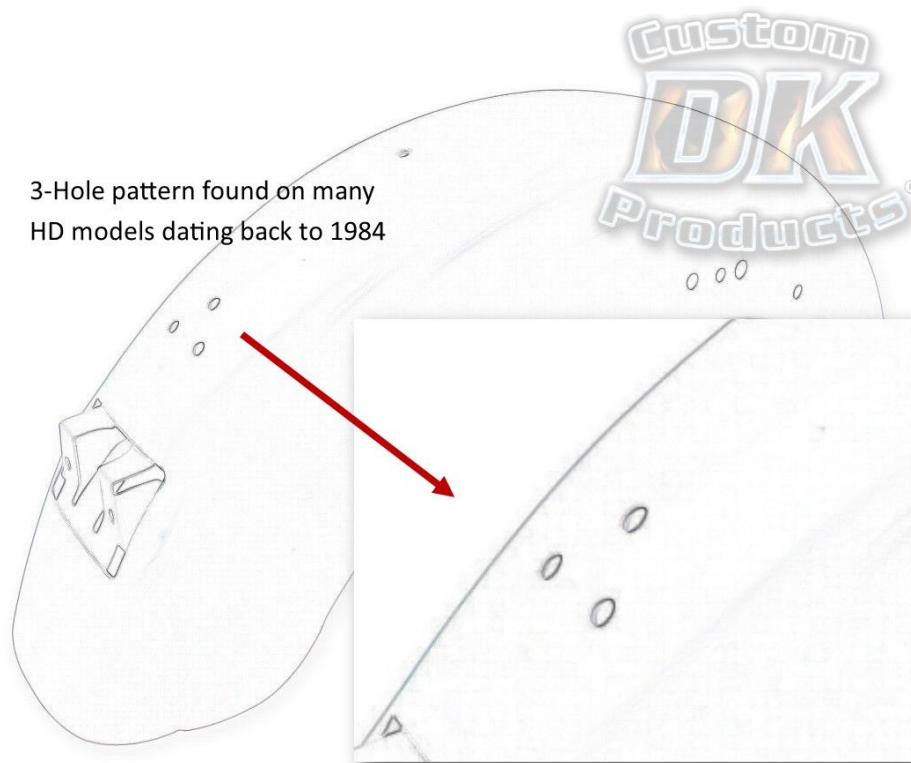

www.DKCustomProducts.com