

INSTALLATION INSTRUCTIONS

TRACER SLIMLINE REAR SADDLEBAG LIGHTS

2941 RED LENS OR 2942 SMOKE LENS

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

⚠ WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

⚠ CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

2	Saddlebag Lights	12	6" Cable Ties
1	Wiring Adapter	8	Cord Keepers
2	Alcohol Pads	6	Cable Tie Mounts
		2	Adhesive Foam Pads

YOU WILL ALSO NEED:

Phillips screw driver, round file, masking tape, clean rag and warm soapy water

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

NOTICE THIS PART WILL REQUIRE FILING INTO OEM PARTS. BE SURE TO MARK AND MEASURE TWICE, FILE ONCE, AND ALWAYS DOUBLE CHECK THE REFERENCE MARKS MADE BEFORE FILING.



⚠ WARNING A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 Remove the main fuse.

STEP 3 Remove the motorcycle's seat to gain access to the battery and rear lights wiring harness. Set the seat on a flat clean surface off to the side.

STEP 4 Refer to PIC 2 and 3. Locate provided Run/Turn/Brake Wiring Adapter. Disconnect the rear lights from the existing wiring harness. Connect the adapter to the disconnected wiring harness.

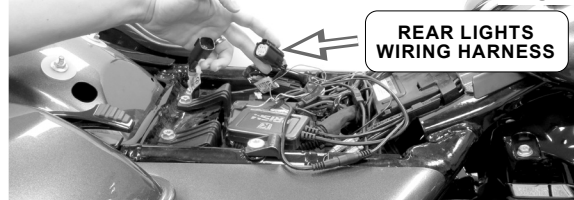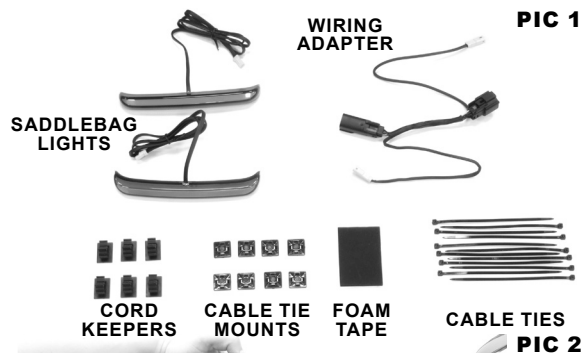

KURYAKYN.COM

INSTALLATION INSTRUCTIONS

TRACER SLIMLINE REAR SADDLEBAG LIGHTS

-CONTINUED-

STEP 5 Locate provided Saddlebag Lights. Connect a light to the left and the right connectors from the wiring adapter.

Note: Looking at the connectors from the adapter, the right connector has a brown wire and left connector has a violet wire.

STEP 6 Reinstall main fuse and test lights for proper run/turn/brake operations. Disconnect lights after operational testing. Set them aside for the time being. Remove main fuse. Position the left and right connectors from the adapter outside the seat area.

Note: Placing the connectors outside the seat area will allow for quick disconnect abilities allowing you to quickly and easily remove your saddlebags when needed.

STEP 7 Refer to PIC 4. Open the saddlebag. Place the wire of the light inside the saddlebag and close the lid. Align and test fit the saddlebag light along the bottom edge of the saddlebag lid. Mark the position of the light with masking tape. Remove the light from the saddlebag.

STEP 8 **IF FILING THE TOP OF THE SADDLEBAG TO CREATE A NOTCH FOR THE LIGHTING'S WIRE:**
Refer to PIC 5. Use a marker to mark where the wire aligns at the top of the saddlebag.

IF NOT FILING THE TOP OF THE SADDLEBAG:
Proceed to step 11.




NOTICE

MEASURE AND CHECK MARKINGS TWICE – FILE ONCE. DOUBLE CHECK ALL REFERENCE MARKS MADE ON THE SADDLEBAG BEFORE FILING. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS DAMAGED AS A RESULT OF THIS INSTALLATION

STEP 9 Refer to PIC 6. Making small adjustments, file into the top of the saddlebag where the marks were made for the saddlebag light's wire.

STEP 10 Refer to PIC 7. Test fit that the wire of the light fits into the created notch in the saddlebag and does not get in the way of the saddlebag lid closing. If the wire does not fit in the notch, make small adjustments to it. Test again. Repeat process until the wire fits just below the top of the saddlebag. **DO NOT OVER FILE AND MAKE THE NOTCH TOO LARGE!**

Note: Determine if you will be making a notch on the inner side, near the front, of the saddlebag to access the wiring adapter. Repeat Steps 8 through 10 for the additional notch.

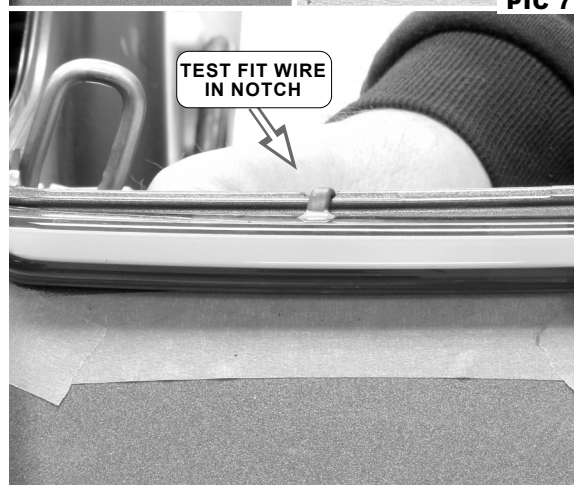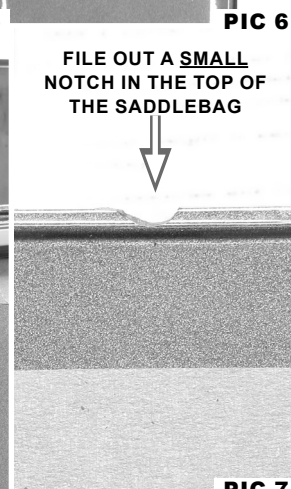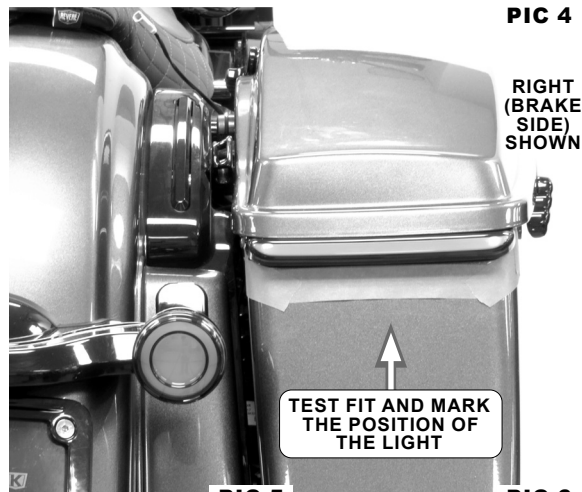

INSTALLATION INSTRUCTIONS

TRACER SLIMLINE REAR SADDLEBAG LIGHTS

-CONTINUED-

NOTICE

ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

- STEP 11** Refer to PIC 8. Use your fingernail to rub the adhesive backing on the light; this will activate the adhesive. Remove and discard the backing. Align the saddlebag light; press into place for one minute; full bonding will occur after 24 hours.

Note: If the bike is going to be operated before full bonding occurs, secure the saddlebag light to the bike with a good quality masking or painter's tape.

- STEP 12** Refer to PIC 8. Remove tape from the saddlebag. Thoroughly clean the saddlebag surface.

- STEP 13** Repeat Steps 7 through 12 for the opposite side.

- STEP 14** Reinstall main fuse and retest lights for proper run/turn/ brake operations.

- STEP 15** Refer to PIC 10. Use provided Cable Ties, Cord Keepers, and Cable Tie Mounts to fasten the light's cord in and around the saddlebag. Be sure to fasten the wires where they won't pinch, pull, or be damaged. Provide enough slack in the wire at the front of the saddlebag, to allow it to connect and disconnect to the wiring adapter on the outside of the saddlebag.

Note: Fully clean all surface areas where mounts and cord keepers will be adhered to.


- STEP 16** Refer to PIC 18. Locate provided foam tape. Test fit the foam tape over the edge, or notch, of the saddlebag where the cord will rest when the saddlebag is closed. Clean the surface area, remove the backing from the foam tape and place it over the wire in its desired position.

Note: Adjust the size of the foam tape as needed.

- STEP 17** Reinstall the seat.



PIC 8

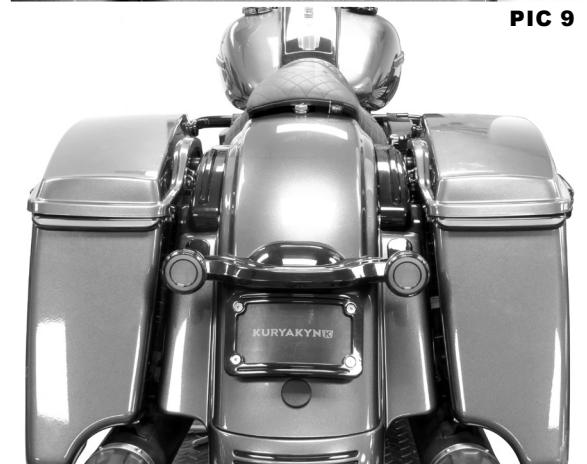

PIC 9



PIC 10



INSTALLATION INSTRUCTIONS

TRACER SLIMLINE REAR SADDLEBAG LIGHTS

-CONTINUED-

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice

KURYAKYN.COM

PAGE 4

302941

DPF-MRK-003 REV A 1/21/21

866 277 9598 | INFO@KURYAKYN.COM

454 COUNTY ROAD VV SOMERSET, WI 54025

