

INSTALLATION INSTRUCTIONS

KURYAKYN SUPER DELUXE WOLO® BAD BOY AIR HORN KIT, GLOSS BLACK 7463

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Wolo Bad Boy Air Horn	1	5/16"-18 x 3/4" Socket Head Cap Screw
1	Cover For Wolo Bad Boy Air Horn	1	5/16"-18 Nylon Insert Lock Nut
1	Wiring Harness	1	Hot Spot Bolt Cap, 5/16"
1	Mounting Bracket	6	6" Cable Ties, Black
1	Round Black Sticker	2	Alcohol Pads

YOU WILL ALSO NEED:

Hex wrench set, torx drivers, combination wrenches, Phillips screwdriver

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

WARNING YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

PIC 1



STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.


STEP 2 Attach the black Mounting Bracket to the Deluxe Horn with the 5/16-18 x 3/4" Socket Head Cap Screw and the 5/16-18 Nylon Insert Lock Nut. Fully tighten fasteners. PIC 2

PIC 2



STEP 3 Once fastener is fully tightened, place the 5/16" Hot Spot into the head of the Socket Head Cap Screw.

STEP 4 Remove the acorn nut and washer that secures the cowbell horn and cover to the bike. Retain acorn nut and washer for reinstallation. Disconnect the lead wires from the horn, located on the bottom side of the horn. Fully remove from the bike.

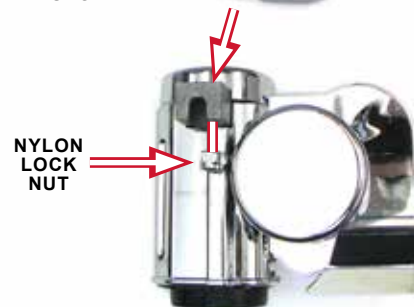

KURYAKYN.COM

INSTALLATION INSTRUCTIONS

KURYAKYN SUPER DELUXE WOLO® BAD BOY AIR HORN KIT, GLOSS BLACK 7463

-CONTINUED-

- STEP 5** Remove the seat or access panel to get to the battery. Connect the ring terminals on the new Horn Wiring Harness to the battery, red wire to positive and black wire to negative. PIC 3

PIC 3

NOTICE

SECURE ALL WIRING AWAY FROM ANY MOVING PARTS, PINCH POINTS OR EXTREME HEAT. KURYAKYN WILL NOT ISSUE A WARRANTY ON ANY ELECTRICAL COMPONENT THAT FAILS DUE TO PINCHED, CRIMPED, BROKEN, ABRADED, MELTED OR FRAYED WIRES.

- STEP 6** Route the wires under the fuel tank to the horn mount. Secure the wiring harness with the provided cable ties. Be certain the wires are away from any pinch points or direct heat.

- STEP 7** Connect the yellow wire from the new Harness to the yellow wire on the stock wiring harness. PIC 3

- STEP 8** Secure the new Horn, with the mounting bracket installed, to the bike with the stock washer and acorn nut (removed in Step 4) See Note Below. The horn will have a tight fit on the stock rubber grommet. Fully tighten the stock acorn nut.

Note: On carbureted models the horn and mounting bracket will need to be rotated on the rubber grommet so the bottom of the horn is angled slightly forward for clearance of the choke knob. PIC 4

- STEP 9** Connect the remaining wiring on the Wiring Harness to the Horn. The white wire connects to the positive or rear spade connector. The black wire, from the bike harness, connects to the front negative spade.

- STEP 10** Under the seat, plug the horn relay on the new wiring harness to the relay connector located a few inches from the battery terminals.

Note: Wrapping the joint between the relay and the relay plug with electrical tape will help keep water and debris out.



NOTICE

SECURE THE RELAY IN A LOCATION SO THE TERMINALS FACE DOWN AND IT IS PROTECTED FROM THE ELEMENTS (ROAD GRIME, RAIN, OR WASHING THE BIKE).

- STEP 11** With the relay in place, turn the key to check the horn function with the OEM handlebar mounted horn button. If you do not have horn function, review all connections.

- STEP 12** Replace the seat or access panel over the battery.

- STEP 13** Tighten all fasteners.

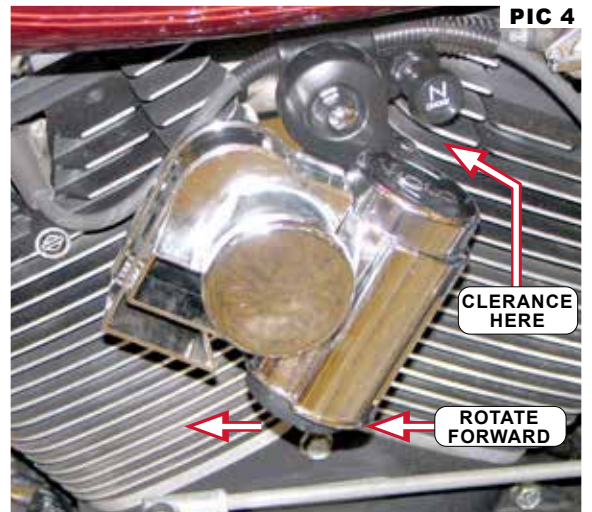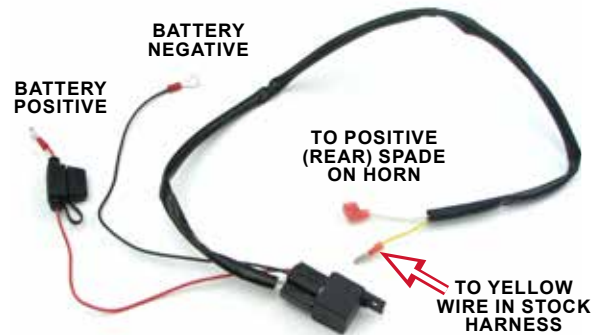

INSTALLATION INSTRUCTIONS

KURYAKYN SUPER DELUXE WOLO® BAD BOY AIR HORN KIT, GLOSS BLACK 7463

-CONTINUED-

- STEP 14** Clean the top of the Wolo Bad Boy Horn, and the circle area on the front of the horn, with the included alcohol pad. Allow the area to dry completely. PIC 5

NOTICE

ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.


DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

- STEP 15** Align and place the provided round black sticker on the front circle area of the Wolo Bad Boy Horn. Press on it to fully secure the sticker in place.

- STEP 16** Test fit the Cover to the Wolo Bad Boy Horn. Rub the backing on the adhesive strip to activate the adhesive before applying. Remove the backing. Press the Cover into place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

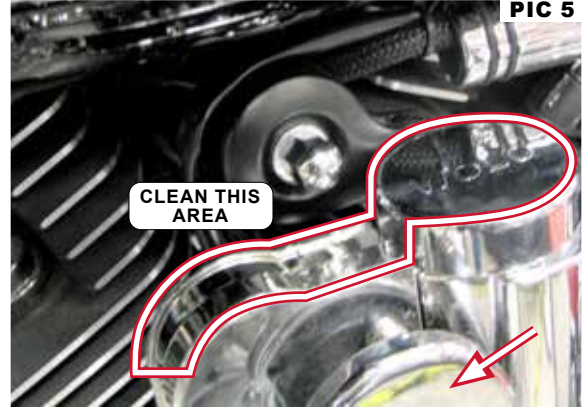



INSTALLATION INSTRUCTIONS

KURYAKYN SUPER DELUXE WOLO® BAD BOY AIR HORN KIT, GLOSS BLACK 7463

-CONTINUED-

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice

