

INSTRUCTION SHEET

# UTV FLARE™ POLARIS RZR PRO XP

**TOOLS NEEDED:**

- 5mm Hex Tool
- Shine Werks™
- Soapy Water
- Squeegee Tool
- Microfiber Cloth


**QUESTIONS?**

- EMAIL: info@getklocked.com  
CALL: (605) 996.3700



**INCLUDED COMPONENTS:**

- (1) UTV Flare™ Windshield
- (2) Paint Protectant Film Strips
- (2) Axia Clamp Kits
- (1) Trim Kit (7 Pieces)

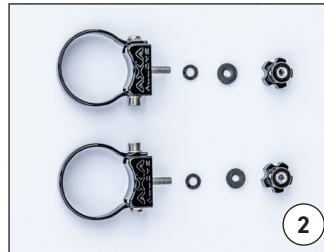

1. Seven pieces of trim have been supplied to cover the bottom of the Flare™ Windshield. 2. Remove the thumb screws, rubber washers, and nylon washers from the assembled kits. 3. Clamp instructions are provided on the back of the red card.



4. Install one clamp on each side of the front roll bars. 5. Install Axia Insert and finger tighten bolt. 6. Place black plastic washers on both studs. 7. Rest windshield on studs and install rubber washers with metal side up.



8. Tighten thumb screws and adjust windshield position so that trim is seated, clamps are symmetrical, and Flare™ lays evenly. 9. Fully tighten rollbar clamps with 5mm tool. 10. Clean your new Flare™ Windshield with Klock Werks Shine Werks™.

## PAINT PROTECTANT FILM INSTALL

With the windshield removed, clean the surface of the hood with soapy water, getting all wax/dirt/etc. off. 12. Spray soapy water on the hood and sticky side of paint protectant film. 13. Apply the film to the desired location. The soapy water will allow the decal to slide around easily. 14. Lay the windshield onto the previously tightened clamps to reference trim position. The trim should lay on the center of the decal (forward/rearward). After adjusting position, use a decal squeegee, or a credit card and microfiber cloth, remove all water from between film and hood.

