

INSTRUCTION SHEET

UTV FLARE™ KAWASAKI KRX 1000

TOOLS NEEDED:


- 5mm Hex Tool
- Shine Werks™
- Rubber Mallet

QUESTIONS?

- EMAIL: info@getklocked.com
- CALL: (605) 996.3700

INCLUDED COMPONENTS:


- (1) UTV Flare™ Windshield
- (1) Trim Kit
- (2) Axia Clamp Kits

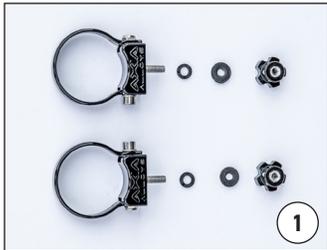

1. Remove the thumb screws, rubber washers, and nylon washers from the assembled kits. 2. Clamp instructions are provided on the back of the red card. 3. Install one clamp on each side of the front roll bars. 4. Install Axia insert and finger tighten clamp bolts.



5. Place black plastic washers on both studs. 6. A single piece of trim has been supplied to cover the bottom of the Flare™ Windshield. 7. With the bulb facing the back side of the windshield, install trim on the lower lip. A rubber mallet may be needed to fully seat the trim (**BE GENTLE**).

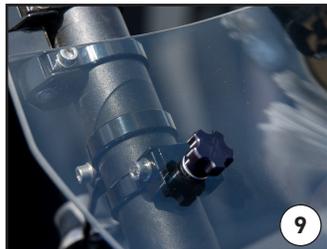

8. Rest windshield on studs and install rubber washers with metal side up. 9. Tighten thumb screws and adjust windshield position so that trim is seated, clamps are symmetrical, and Flare™ lays evenly. 10. Fully tighten rollbar clamps with 5mm tool. 11. Clean your new Flare™ Windshield with Klock Werks Shine Werks™.

