



# 2018 SPORT GLIDE FLARE™ WINDSHIELD FOR 2018+ FLSB

## INCLUDED COMPONENTS:

- 1 Flare™ Windshield


## HELPFUL FOR INSTALLATION:

- Torx Screwdriver  
- Clean cloths

## QUESTIONS?



**EMAIL:**  
info@getklocked.com  
**CALL:** (605) 996.3700

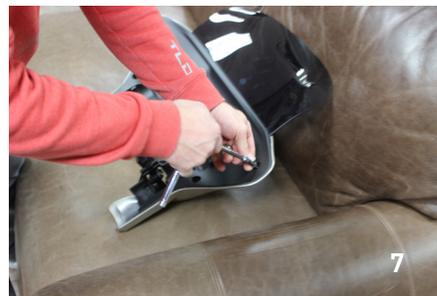

1. Protect painted surfaces
2. Release the two mount clamps around the forks **(Fig 1)**
3. Carefully remove the fairing assembly and place it painted side down on a clean soft cloth **(Fig 2)**
4. Remove the 7 torx screws that hold the fairing halves together and separate them **(Fig 3)**
5. Place the inner fairing on a clean soft cloth to be able to remove the windshield **(Fig 4)**
6. Remove the two mounting screws that hold the windshield in place **(Fig 5)**
7. Install your Klock Werks Flare windshield onto the mount points and torque the screws to factory specifications **(Fig 6)**
8. Reinstall the fairing components together **(Fig 7)**
9. Install the fairing on your Sport Glide and enjoy your new Klock Werks Flare windshield! **(Fig 8)**



**CAUTION:** Klock Werks cannot be held responsible for any damage to painted surfaces during removal or addition of Klock Werks parts.