

# FLARE™ FOR INDIAN CHALLENGER

**INCLUDED COMPONENTS:**

- (1) Flare™ Windshield
- (1) Instruction Sheet


**TOOLS REQUIRED:**

- + 4 mm Hex Key Socket
- + Torque Wrench

**QUESTIONS?**



**EMAIL:**  
info@getklocked.com  
**CALL:** (605) 996.3700

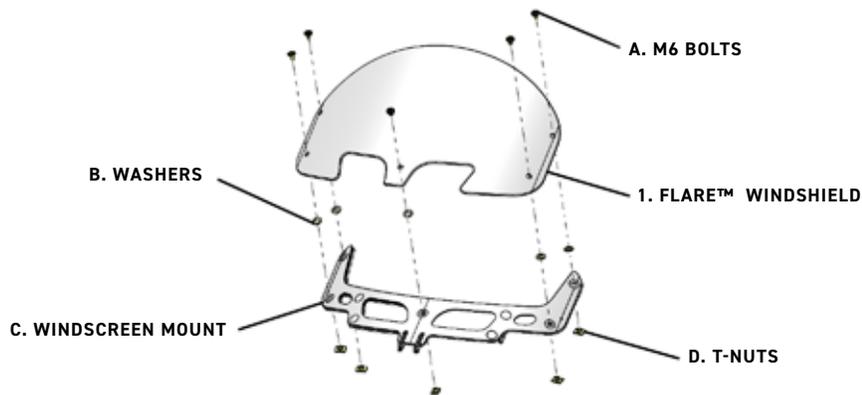

**REMOVAL**

1. With power windscreen extended in the upward most position, remove five M6 bolts and five T-nuts and retain for re-assembly. T-nuts are located on the back side of the windscreen mount. The five rubber washers between the windshield and windscreen mount do not need to be removed.

**INSTALLATION**

2. Place new Flare™ Windshield (1) over windscreen mount (C) ensuring five washers (B) are in place.
3. Re-install the retained five rear T-nuts (D) and finger tighten five M6 bolts (A) ensuring that the shoulder of the bolts has engaged the Flare™ Windshield (1). Torque M6 bolts to 36 +/- 6 in. lbs. (4.67 +/- 0.6 Nm).



Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.