

INSTRUCTION SHEET







UTV FLARE™ FOR HONDA TALON

INCLUDED COMPONENTS:

- (1) UTV Flare™ Windshield
- (4) Axia Clamp Kits
- (1) Instruction Sheet

QUESTIONS?

-  **EMAIL:**
info@getklocked.com
-  **CALL:** (605) 996.3700

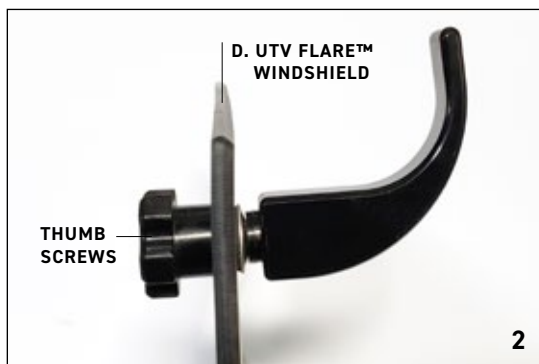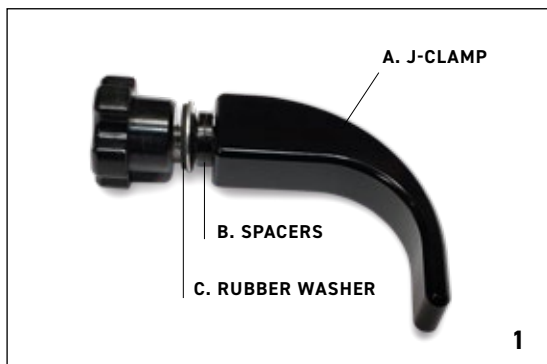

1. Install the provided rubber trim onto the bottom edge of your UTV Flare™ Windshield
2. Starting from the back, install the windshield clamps around the A-pillars in the following order (FIG 1):
 - A. J-Clamp
 - B. 2 spacers
 - C. rubber washer
 - D. UTV Flare™ Windshield
3. Secure the windshield clamps with the thumb screws (FIG 2)
4. Enjoy your new UTV Flare™ Windshield!