


INSTRUCTION SHEET



FAIRING VENT SCREEN FOR 2014+ HD FLH MODELS

INCLUDED: (1) Vent Screen • (1) Tube of Silicone • Instruction Sheet

1. Protect painted surfaces.
2. Remove the four fairing fasteners, unplug the headlamp and remove the outer fairing.
3. Take the silicone from the kit and apply to the inner fairing.
4. Install the vent screen on the inner fairing (as seen in the image on the right).
5. Reinstall the outer fairing and the windshield and you're done!

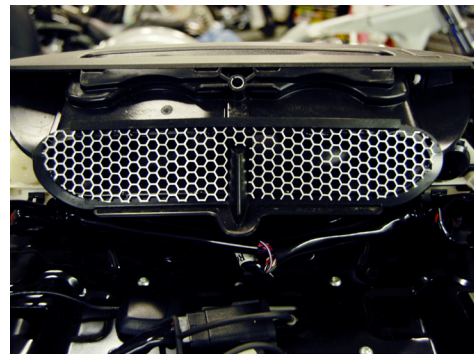

QUESTIONS?



EMAIL: info@getklocked.com



CALL: (605) 996.3700

Klock Werks cannot be held responsible for any damage to painted surfaces during the installation of the Fairing Vent Screen. Use caution when working with painted surfaces.

GETKLOCKED.COM