




Installation Instructions

For Kodlin Trackboards for HD Touring model K73232

1. Remove your old floorboards saving the four pivot bolts and four nuts for reuse later.
2. Layout your Trackboards, four mounts and hardware. See picture #1
3. Match the mounts with the bolt hole patterns on bottom of the Trackboards.
4. Using medium strength thread locker on all bolts install three long bolts in each mount and two short bolts on the bottom outer edge of each Trackboard. After you have started all the bolts torque each one to 96-108 In/lbs. See picture #2
5. Install Trackboards using original hardware from removed floorboards. Apply medium strength thread locker to bolts, install nuts and torque to 60-80 in/lbs.

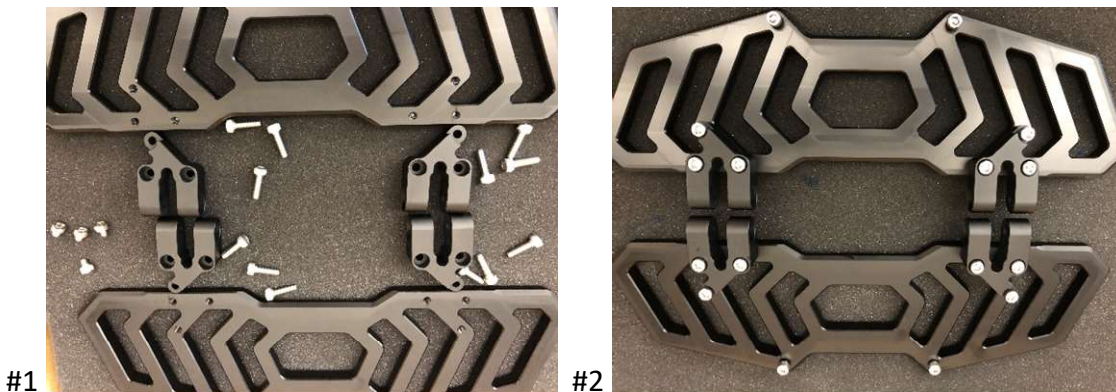

For the latest install guides, video's, FAQ's. and Tech-Tip's scan QR code!



Revision Date: 5/18/2022

www.kodlinusa.com