

# Le Pera<sup>®</sup>

## DEUCE SOLO INSTRUCTIONS

Figure 1

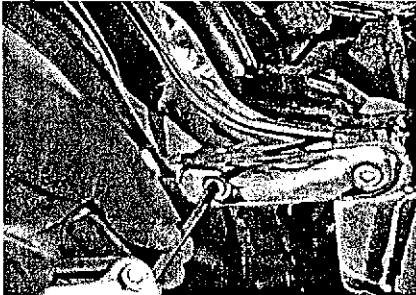


Figure 2


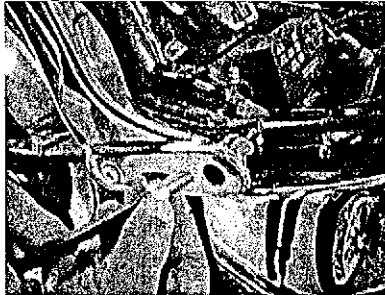


Figure 3

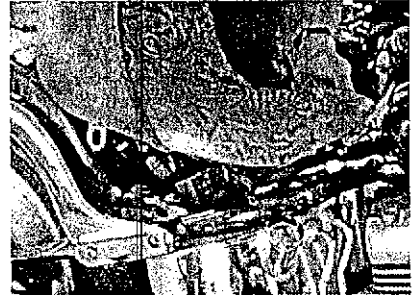

1. Loosen but do not remove rear strut bolt use a 5/16 Allen Wrench
2. Take front strut bolt completely out
3. Slide your new solo nose bracket into frame mounting bracket (just like your stock seat)

Figure 3A



Figure 4


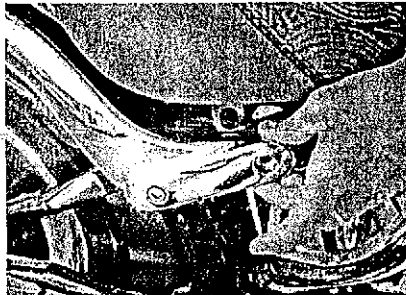


Figure 5

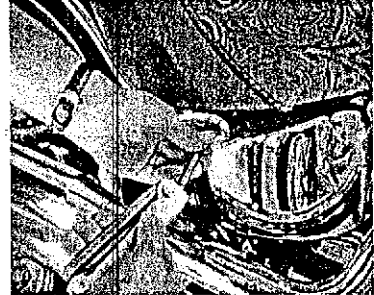

- 3A. Slide the front of the seat to the tank. It may be necessary to pull the nose of the seat up slightly to allow your solo to drop into place.
4. Pull struts slightly away from the frame allowing solo side brackets to drop in between the strut and frame.
5. Place front strut bolt back through the side solo mounting bracket

Figure 6

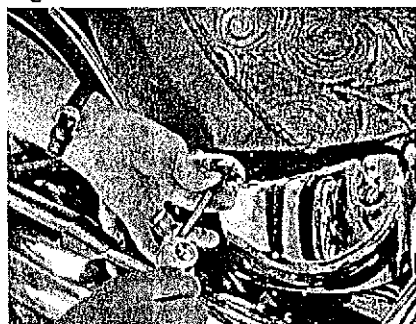


Figure 7


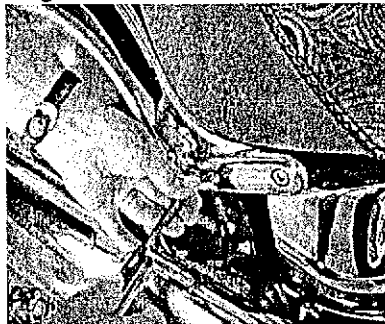


Figure 8

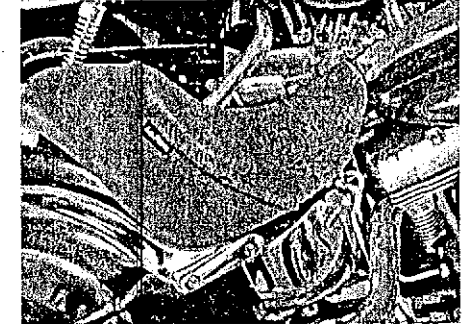

- 6 & 7. Tighten both front and rear strut bolts.
8. There you go..... Happy Riding!!!

8207 LANKERSHIM BLVD. N. HOLLYWOOD, CA 91605  
PHONE 818-767-5110 FAX 818-767-0947 E-MAIL: INFO@LEPERA.COM