

Le Pera®

LK SOLO & PILLION FOR 200 mm TIRE FXST



1




2




3



4

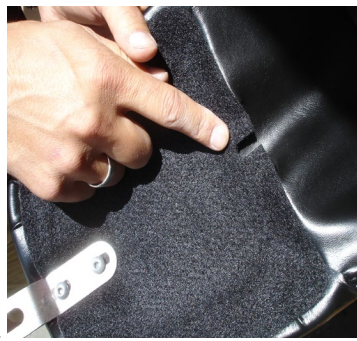

4a

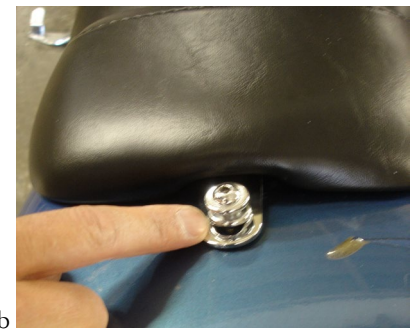

4b



4c



5



Spool washer

Congrats on your new Le Pera purchase. As you can see from the pictures installing your new pillion is a piece of cake and should only take you a couple of minutes to get you and your passenger on the road.

1. Take out existing seat bolt mount
2. Install new chrome bolt and spool washer
3. Bolt rear mounting bracket (included) to pillion pad
4. Position pillion on center of fender and slide forward, making sure the slot (4A) on the bottom of the pillion slides into the groove of the (4B) spool washer. (4C) Pull up the front of the pillion making sure it is properly connected.
5. Now all you have to do is bolt the back of the pillion down to your fender and you are ready to roll!!