



**DISCONNECT THE BATTERY FIRST!**

Once the Molex Connectors have been removed from your handlebar switch harness, simply match the colored wire with the mating terminal found on the extension harness. Be sure to cover the terminals with the 3" long heat shrink allowing 1/2" overlap on each side. Heat the shrink tubing in place on each terminal splice and allow the tubing to cool for a few minutes before reinstalling. When all connections have been made, cover the extension harness with the heat shrink provided.


**Male Terminal Removal & Re-Installation**

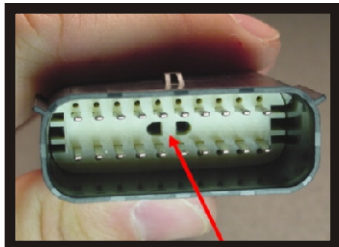


1. Place small needle nose pliers into the service holes on male connector.

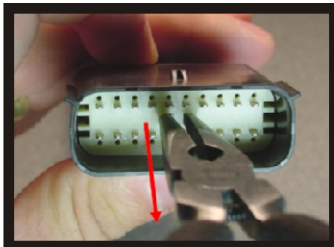

2. Pull outward on the pliers, listen for a click, then the TPA will be unlocked.

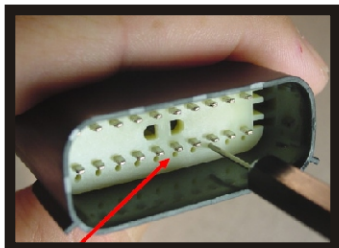

3. Once TPA is unlocked, insert the removal tool as shown & pull wire to remove from connector housing.

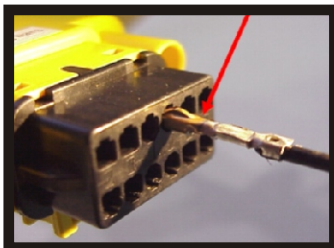


4. When our extension harness is installed onto the factory switch wiring, re-install the male terminals into the connector as shown.

2007 - Up	
Left Side	Right Side
ORANGE/WHITE	BLACK/RED
YELLOW	WHITE/BROWN
BLUE	WHITE/BLACK
WHITE	GRAY
WHITE/VIOLET	RED/YELLOW
YELLOW/BLACK	ORANGE/WHITE
BLACK	
BLACK/RED	


**DISCONNECT THE BATTERY FIRST!**

Once the Molex Connectors have been removed from your handlebar switch harness, simply match the colored wire with the mating terminal found on the extension harness. Be sure to cover the terminals with the 3" long heat shrink allowing 1/2" overlap on each side. Heat the shrink tubing in place on each terminal splice and allow the tubing to cool for a few minutes before reinstalling. When all connections have been made, cover the extension harness with the heat shrink provided.


**Male Terminal Removal & Re-Installation**

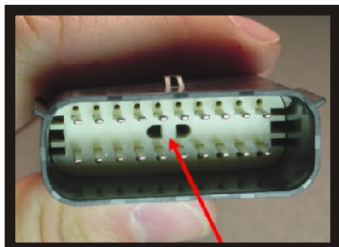


1. Place small needle nose pliers into the service holes on male connector.

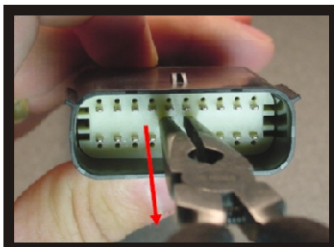

2. Pull outward on the pliers, listen for a click, then the TPA will be unlocked.

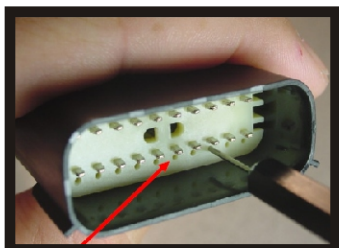

3. Once TPA is unlocked, insert the removal tool as shown & pull wire to remove from connector housing.

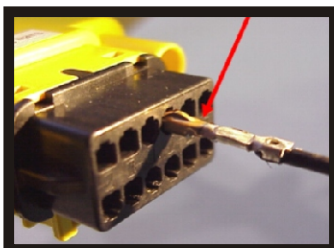

4. When our extension harness is installed onto the factory switch wiring, re-install the male terminals into the connector as shown.

2007 - Up	
Left Side	Right Side
ORANGE/WHITE	BLACK/RED
YELLOW	WHITE/BROWN
BLUE	WHITE/BLACK
WHITE	GRAY
WHITE/VIOLET	RED/YELLOW
YELLOW/BLACK	ORANGE/WHITE
BLACK	
BLACK/RED	