

THRASHIN SUPPLY[®] FOOTPEG INSTALLATION INSTRUCTIONS



IMPORTANT NOTICE

THIS INSTALLATION SHOULD BE DONE BY AN EXPERIENCED MECHANIC WHO HAS ACCESS TO A FACTORY SERVICE MANUAL AND ALL REQUIRED TOOLS

CAUTION

INCORRECT INSTALLATION CAN CAUSE DAMAGE NOT COVERED UNDER WARRANTY. FAILURE TO INSTALL COMPONENTS CORRECTLY CAN RESULT IN SERIOUS INJURY TO MOTORCYCLE, OPERATOR, PASSENGER, AND/OR OTHERS.


- 1 Refer to the proper service manual for your model motorcycle for removal/install of foot pegs.
- 2 Wash, clean and inspect all new THRASHIN[®] parts & hardware.
- 3 Clean and inspect any and all mounting bolt holes on motorcycle.
- 4 When threading into aluminum lightly coat the threads and under head flange with lube, we recommend using moly lube.
- 5 When threading into steel lightly coat the threads of the new fasteners with loctite and coat the under head flange with moly lube and where applicable lightly coat the washers on both sides with moly lube.
- 6 Torque all fasteners following the recommended torque values in your service manual and always tighten fasteners stepping the torque value in small increments.



REMOVE EXISTING PEGS



INSTALL CLEVIS

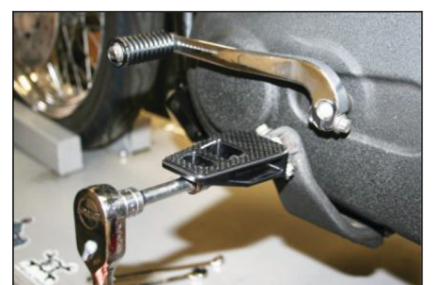

INSTALL PEG

