
Note: These shields **will not work** with the old ECE R22.05 Gringo S helmets because the closure has been updated.



1. Use a screwdriver to carefully loosen the screws that hold the aluminium washers on both sides of the shield. Remove the shield by flexing both sides away from the helmet's outer shell. Set the screws and aluminium washers to the side - **you'll re-use them when you install the Gen 2 shield.**

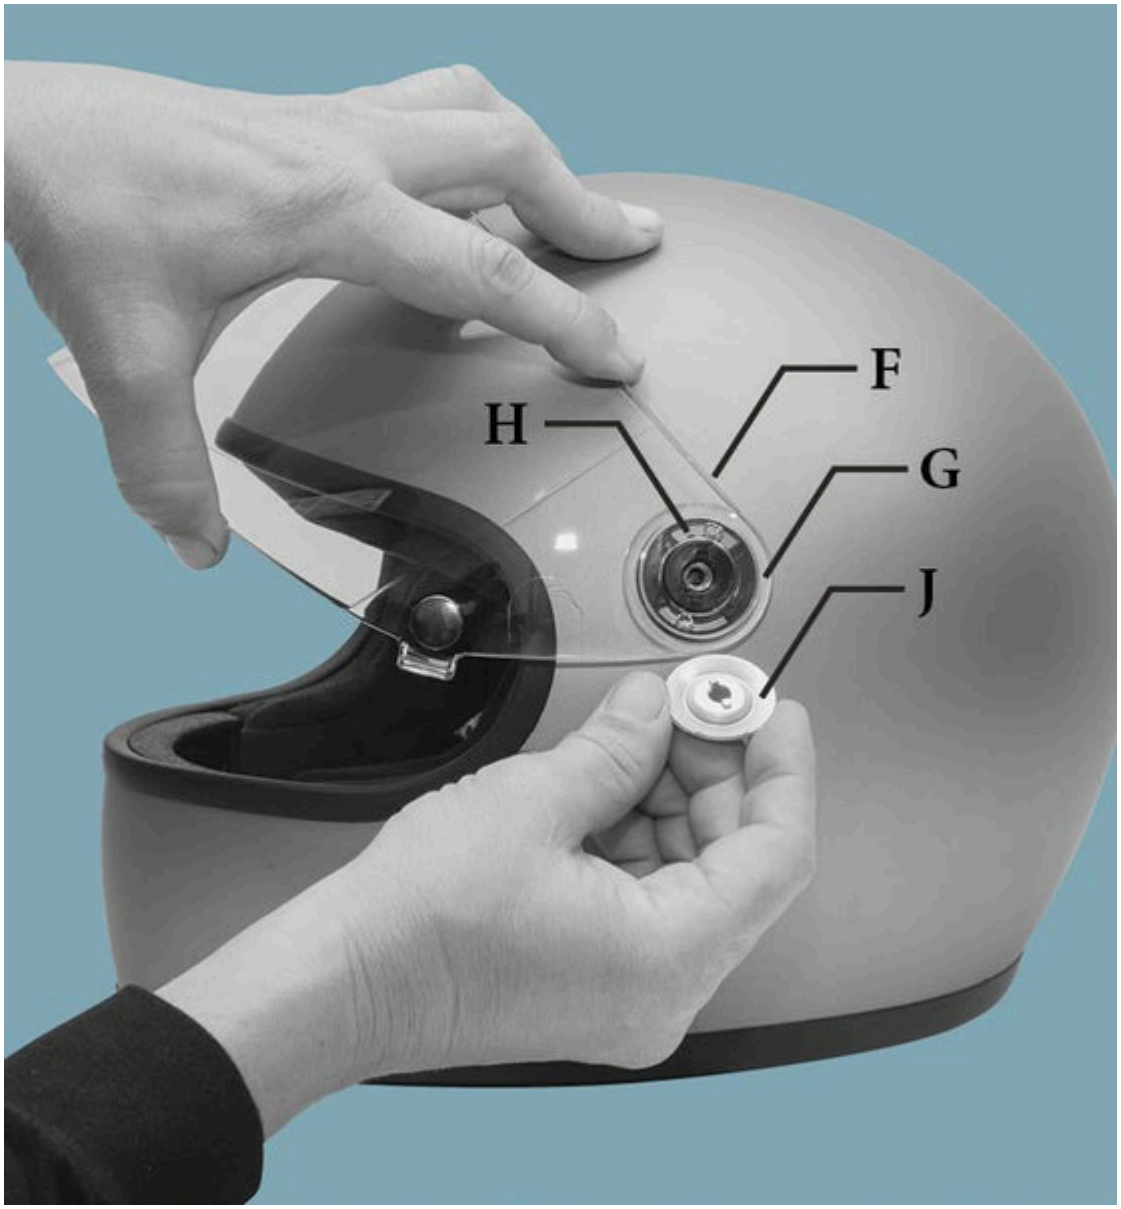

2. Hold one side of Gen 2 shield (F) against hinge plate assembly (G),
making sure the shield's two moulded pins (H) are correctly aligned inside their corresponding curved slots. Install one aluminium washer as shown, making sure the two tabs (J) are correctly engaged against the hinge plate assembly. Hold the shield and washer in place and proceed to Step 3.



3. Put a drop of blue Loc-Tite or similar medium-strength thread compound on one screw and carefully thread it into the brass insert on the side of the helmet. Use a screwdriver to tighten the screw against the aluminium washer.
DO NOT OVER-TIGHTEN. Repeat Steps 2 and 3 for the remaining side of the Gen 2 shield.

Tech Tips:- To clean your shield, use mild soapy water solution and a microfiber cloth to loosen bugs and road debris, then dry it with a second clean microfiber towel. Never use harsh household or petroleum-based chemicals to clean your shield, especially on the inside, as they can destroy the shield's special coatings. If the retainer snap on your Gringo S shield becomes tight or sticky, apply one drop of general-purpose light household oil to the inside. Apply one drop of medium-strength blue Loc-Tite to the threads of both hinge screws every time you install a shield. Apply one drop of medium-strength blue Loc-Tite to the threads of both hinge screws every time you install a shield.