


Dakota Digital

HLY-3016 PERFORMANCE SPEEDOMETER/TACHOMETER COMBO (weather and vibration resistant for exposed environments)

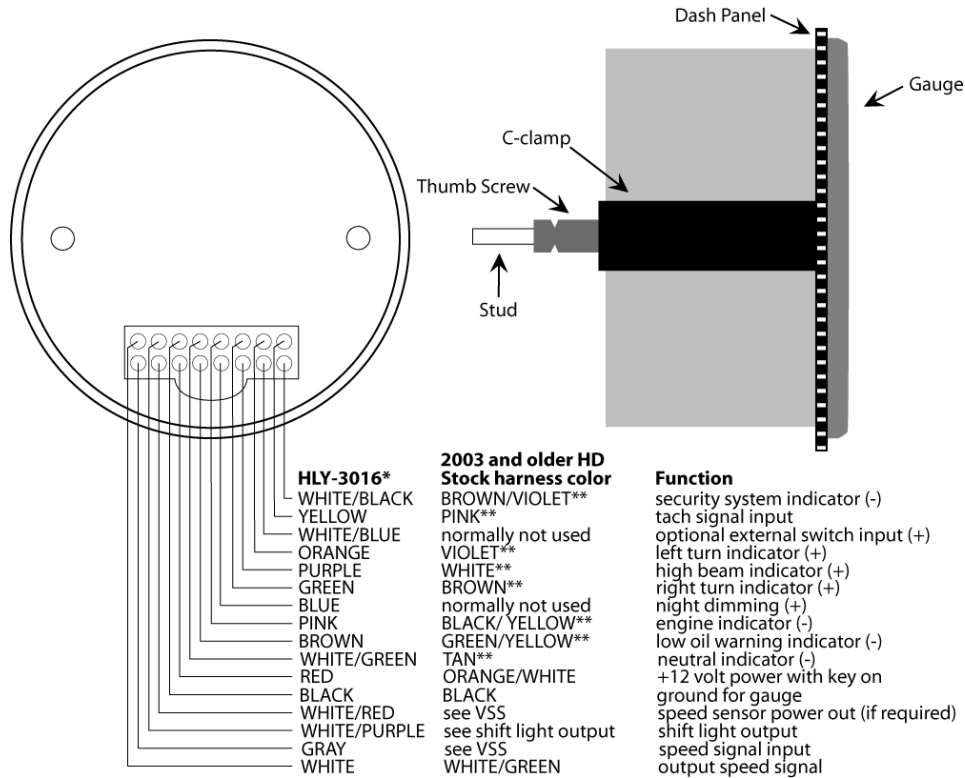

***To avoid damage to motorcycle**, please see Speedometer, Tachometer, and Status and Warning Indicators sections for details on locating VSS, Tachometer, and indicator wires for **most motorcycle applications**

The Check Engine indicator will not function using these gauges on **2004+ HD models due to the signal being fed through the 'data bus', however the HD diagnostic tool can still check and clear codes through the diagnostic connector. **2004+HD** Indicator wires match the above chart, but please read VSS and Tachometer sections for proper wiring.

GAUGE SETUP AND CALIBRATION

The setup menus are entered by holding the switch in while turning the key on. The menus are as follows:

Main Menu	Sub Menu	Description
SPEED	AUTO	auto calibrate speed
	ADJ	adjust calibrate speed
	UNIT	select mph or kph units MPH KPH
TACH	SERVICE	miles to service setting
	ENGINE	set engine cylinder setting
	WARN	set rpm shift warning point
	UPDATE	set rpm update rate for digital readout
	SIGNAL	select normal or low voltage tach signal NORMAL LO VLT
INFO	MODEL	Gauge model number
	VER	Gauge revision code
	SP CAL	speed cal setting
GEAR		transmission gear display selection
	OFF	
DONE	PROGRM	restart system with new settings

POWER

Connect the red wire from the main harness to accessory power from the ignition switch.

Never connect this to a battery charger alone. It needs to have a 12 volt battery connected to it. Battery chargers have an unregulated voltage output that will cause the system to not operate properly.

GROUND

The black wire is the main ground for display system. A poor ground connection can cause improper or erratic operation.

STATUS AND WARNING INDICATORS

The right turn, left turn, and high beam indicators are activated by 12 volts at their respective hook-up wires. The right turn signal wire is green, the left turn signal wire is orange, and the high beam wire is purple. These can be connected to the same wires that the indicator lights would be connected to. The display system wire colors may not match the wire colors in your electrical wire harness, consult a service manual to determine the color code and location of any wires you cannot locate.

The neutral, low oil, and check engine indicators are activated by ground at their respective hook-up wires. The check engine wire is pink, the low oil wire is brown, and the neutral wire is white/green.

LOW VOLTAGE WARNING

When the voltage drops below 11 volts with the engine running, LO VLT will be displayed.

SECURITY SYSTEM INDICATOR

The security system indicator is a red light that is activated by 12 volts to the white/black wire. It will light up whether the gauge is powered or not.

VSS(Vehicle Speed Sensor connections)

Failure to calibrate the speedometer may cause your odometer mileage to increase very rapidly.

The gray wire connects to the vehicle speed sensor. For two wire pulse generators attached to a speedometer cable, attach one wire from the sensor to the speedometer ground and connect the other to the gray wire. If the signal is being shared by a cruise control or ECM, make sure they all use a common ground for the pulse generator.

For inductive pickup's, connect one terminal from the pickup to ground and connect the other terminal to the gray wire on the gauge.

For 3 wire Hall-effect sensors, refer to the installation instructions for the sensor to determine wire color code. Most 3 wire sensors use the following color code: RED – power, BLACK – ground, WHITE – speed signal. Connect the sensor signal wire to the gauge gray wire, connect the sensor power wire to the gauge white w/red stripe, and connect the sensor ground wire to the gauge black wire. If the bike's harness provides +5V power and ground to the sensor, please leave all wires connected to the bike as from the factory and "Tee" into the signal wire.

For speed sensor integrated into a vehicle wiring harness(most **Metric Cruisers** w/factory VSS utilize a 3-wire Hall-effect sensor), consult a service manual to determine the color code and location of the speedometer signal. **If the factory harness supplies +5V to the sensor, please utilize the factory connection in place of the white/red power wire.**

For 2004+ Harley and 2003 V-Rod applications make sure to simply "Tee" into the white wire on the speed sensor to make certain the ECM will still receive its proper VSS signal from the sensor.

2006+ Sportsters utilize a black/blue wire for the VSS signal in place of the white wire on most big-twin models.

The speedometer is fully adjustable and calibration is discussed in the **Speedometer Setup** section. VSS wires should be isolated from the ignition system. Coils, plug wires, or tachometer signal wires routed near or with the VSS wire can cause: erratic speedometer operation, speed reading at a standstill, incorrect or difficult calibration.

TACHOMETER

The tachometer is used by connecting the yellow wire from the main harness to the negative side of the coil or to an ignition module tach output. The tachometer is adjustable for 1 – 15 cylinder settings. The 1 cylinder setting is used for single-fire ignition systems without a buffered tach output.

For tach signals integrated into a vehicle wiring harness, consult a service manual to determine the color code and location of the tachometer signal. The bar displays rpm x1000. The starting bar range is 250 – 6500. If the rpm exceeds 6500 the bar will automatically switch to a 500 – 13,000 bar readout and will remain there until the rpm drops below 2000.

For 2004+ Harley and 2003 V-Rod

The tachometer signal will come from the negative side of the ignition coil. Blue/Orange for the front cylinder, Yellow/Blue for the rear cylinder, connect the tachometer input to **only one** of these two wires, set the tachometer for a 1 cyl signal, see Tachometer Set-up for instructions.

SHIFT LIGHT OUTPUT

The shift light output is a ground switch that turns on whenever the rpm exceeds the warning point. It can handle 0.25A, equivalent to a 3W 12V bulb. Connect a low current indicator as follows: One wire from the light will connect to 12 volts, the other wire will connect to the white/purple wire from the gauge.

If a large or high power light will be used, then a relay should be connected as follows: One of the coil wires should be connected to 12 volts and the other coil wire will connect to the white/purple wire from the gauge. The relay contacts will be used to switch power to the light. Any 12volt automotive relay can be used, such as Dakota Digital's RLY-1 30A relay.

SPEEDOMETER SETUP

Press and hold the switch while turning the key on and starting the engine. Once the engine is running, release the switch. When "SPEED" is displayed, press the switch again and then release it. The message display should switch between "AUTO", "ADJUST", "UNIT", and "SERVIC".

METRIC SELECTION

If you are setting the system up for metric displays, press the switch when "UNIT" is displayed.

Press and release the switch until "KPH" is displayed.

Press and hold the switch until "DONE" is displayed.

SPEED CALIBRATION

There are two methods for calibrating the speedometer, auto cal and adjust. Either one can be used. Auto cal requires that you have one measured mile marked out (km for metric), this is the best method to start with if your speedometer is a long ways off. Adjust requires you to follow another vehicle going at a set speed or timing your self over a mile to determine your speed.

Auto Cal

When "AUTO" is displayed press and release the switch. The speedometer will display "CL" and the message display will show zeroes. You should now begin driving the measured mile. The message display will count the number of pulses received from the sensor. The message display cannot be used to determine when a mile has been driven. Once you reach the end of your marked mile, press the switch again. The calibration is now done.

Adjust

When "ADJUST" is displayed press and release the switch. The system will restart with "ADJUST" on the message display. The speedometer will show the speed reading. Begin driving at a known speed. When the switch is pressed the speedometer reading will begin increasing until the switch is released. The next time the switch is pressed the reading will begin decreasing until it is released. When the speedometer is correct you can release the switch. The new calibration will be saved if no adjustments are made for 7-10 seconds.

PLEASE NOTE:

Common problems during calibration:

VSS wires should be isolated from the ignition system. Coils, plug wires, or tachometer signal wires routed near or with the VSS wire can cause many problems. If you are seeing **erratic speedometer operation, registering speed at a standstill, or speed changes with engine RPM**, please double-check your VSS wire and tachometer wire routing making sure the VSS wire is separated from any ignition system components.

If your **speedometer registers '00'** all the time, the unit is not receiving a VSS signal, please double-check your sensor wiring and mounting. The speedometer cannot be properly calibrated until you are registering a stable, but incorrect speedometer reading.

Please see **Speed sensor voltage checks** on the last page for assistance in checking your sensor.

TACHOMETER SETUP

The gauge can be set to read from 1-15 cylinder ignition signals. It can also be set to read either 12 volt tach signals or 5 volt tach signals found on some engine computers. The digital tachometer update rate can be adjusted between slow, mid, and fast. The rpm warning/shift point can be adjusted from 2200 – 14800. The tachometer will read from 350 – 17,500 rpm. The bar tach automatically switches between 6500 full scale and 13,000 full scale depending on the rpm.

Press and hold the switch while turning the key on. Release the switch. When "TACH" is displayed, press the switch again and then release it. The message display should switch between "ENGINE", "WARN", "UPDATE" and "SIGNAL".

Engine cylinder setup

When "ENGINE" is displayed press and release the switch.

The current cylinder setting will be displayed.

Press and release the switch until the desired setting is displayed.

Press and hold the switch until "DONE" is displayed.

Rpm warning setup

When "WARN" is displayed press and release the switch.

The current warning point will be displayed.

Press and release the switch until the desired setting is displayed.

Press and hold the switch until "DONE" is displayed.

Display update setup

When "UPDATE" is displayed press and release the switch.

The update setting will be displayed. (1=slow, 2=mid, 3=fast)

Press and release the switch until the desired setting is displayed.

Press and hold the switch until "DONE" is displayed.

Tach signal setup

When "SIGNAL" is displayed press and release the switch.

The setting will be displayed. (NORMAL or LO VOLT)

Press and release the switch until the desired setting is displayed.

Press and hold the switch until "DONE" is displayed.

GEAR INDICATOR SETUP

- This gauge can optionally display the gear position. The gauge can learn the positions based on speed and rpm. It will work with 3, 4, 5, or 6 speed transmissions.
- To program the gear positions, begin at a section of road where you can gradually shift through all of the gears. Press and hold the switch while turning the key on and starting the engine. Once the engine is running, release the switch. When "GEAR" is displayed, press the switch again and then release it.
- The display will show the current selection, "OFF" or "PROGRM". Press and release the switch to change the selection.
- When "PROGRM" is displayed, press and hold the switch to begin the gear programming. The message will show "LO RPM" if the engine rpm is below 1500, or "LO SPD" if the vehicle speed is below 5.
- Begin driving in 1st gear. The display should show GEAR 1 and the "1" should be flashing. Drive at a steady speed then press and release the switch. The "1" should stop flashing for a few seconds and then switch to a flashing "2".
- Shift to 2nd gear and drive at a steady speed. Press and release the switch again.
- Repeat this through each gear. When you are done, press and hold the switch until the display shows "DONE".
- Press and release the switch to restart the gauge in normal operation.

MILES TO NEXT SERVICE SETUP

The service mileage is a countdown mile meter. The service mile display can be disabled or can be set to count down from 500 – 7500 miles. If the service mile is enabled and it gets to 0 miles it will display "SERVIC DUE". If the push button switch is pressed and held while "SERVIC DUE" is displayed, the service miles will be reset.

To change the service miles, enable, or disable the reading, go to the SPEED setup menu and then select "SERVIC".

The current setting will be displayed. "OFF" or a mileage from 500 – 7500.

Press and release the switch until the desired setting is displayed.

Press and hold the switch until "DONE" is displayed.

INFO MENU

The INFO menu is used to get the gauge model number, gauge revision code, and speed cal setting. This will normally only be used for diagnostic and troubleshooting.

NIGHT DIMMING

Your display system has a dimming feature that dims the display intensity. Normally the system is at full brightness for daytime viewing. When the blue wire has 12 volts the display intensity will be reduced. Connect this to a toggle switch if you wish to use this feature. To have the system at full brightness all of the time, leave the blue wire disconnected.

FUNCTION SWITCH

The function switch on the front of the speedometer allows access to all of the mileage, rpm, and performance information. Pressing and releasing the function switch toggles through the different displays. The display sequence is as follows:

<u>SPEED MENU</u>		
ODOMTR	>	000000 odometer mileage
TRIP A	>	A 000.0 trip meter mileage A
TRIP B	>	B 000.0 trip meter mileage B
SERVIC	>	S 0000 miles since last service (if programmed)
GEAR	>	current gear position (if programmed)
KPH	>	KPH 00 metric speed conversion (to mph if metric unit is selected)
T MENU	>	switch to tach menu
P MENU	>	switch to performance menu
<u>TACH MENU</u>		
HOURS	>	HR 0.0 re-settable hour meter
RPM	>	R 0000 rpm reading in alpha display
TACH	>	tachometer displayed in place of speed
WARN	>	W 0000 current rpm warning or SHIFT if over set point
LO OIL	>	only visible if input is activated
LO VLT	>	only visible if warning is activated
S MENU	>	switch to speed menu
P MENU	>	switch to performance menu
<u>PERFORMANCE MENU</u>		
HI RPM	>	H 0000 high rpm recall
HI SPD	>	HI 00 high speed recall
0-60 T	>	60 00.0 0-60mph time (0-100kph)
QUARTR	>	QT 00.0 quarter mile time
QT MPH	>	QT 00 quarter mile speed
S MENU	>	switch to speed menu
T MENU	>	switch to tach menu

Example: If the odometer mileage is currently displayed and you want to change to the 0-60 time, press and release the switch until "P MENU" is displayed. Wait until the display switches to "HI RPM". Press and release the switch until "60 TIM" is displayed. After a couple of seconds the display will show the current 0-60 time.

WIRING COLOR CODE FOR GAUGE:

HLY-3016* PIN # ON GAUGE	2003 and older HD* Stock harness color	Function
1- WHITE	WHITE/GREEN	output speed signal
2- WHITE/PURPLE	normally not used	tach warning output
3- BLACK	BLACK	ground for gauge
4- WHITE/GREEN	TAN**	neutral indicator
5- PINK	BLACK/YELLOW**	engine indicator
6- GREEN	BROWN**	right turn indicator
7- ORANGE	VIOLET**	left turn indicator
8- YELLOW	PINK**	tach signal input
9- GRAY	see VSS section*	speed signal input
10- WHITE/RED	varies with application	speed sensor power out (if required)*
11- RED	ORANGE/WHITE	+12 volt power with key on
12- BROWN	GREEN/YELLOW	low oil warning indicator
13- BLUE	normally not used	night dimming
14- PURPLE	WHITE	high beam indicator
15- WHITE/BLUE	normally not used	optional external switch input
16- WHITE/BLACK	BROWN/VIOLET	security system indicator

*To avoid damage to motorcycle, please see Speedometer, Tachometer, and Status and Warning Indicators sections for details on locating VSS, Tachometer, and indicator wires for **most motorcycle applications**

The Check Engine indicator will not function using these gauges on **2004+ HD models due to the signal being fed through the 'data bus', however the HD diagnostic tool can still check and clear codes through the diagnostic connector. **2004+HD** Indicator wires match the above chart, but please read VSS and Tachometer sections for proper wiring.

MOUNTING:

The gauge requires a round hole 3-3/8" in diameter. It should be inserted into the opening from the front and the U-clamp will be installed from the back. Tighten the two nuts on the U-clamp so that the gauge is secure.

Troubleshooting guide.

Problem	Possible cause	Solution
Gauge will not light up	Red wire does not have power. Black wire is not getting a good ground. Gauge is damaged.	Connect to a location that has power. Connect ground to a different location. Return gauge for repair. (see instructions)
Gauge lights up, but speed will only show zero.	Gray wire is not connected properly. Speed sensor not grounded properly.	Check connection from gray wire to speed signal wire. Move ground to different location, preferable close to the

	Speed sensor is not being turned by transmission. Sensor is not sending a speed signal. Gauge is not calibrated	speedometer ground. Check cable connection between sensor and transmission. Sensor can be tested by spinning the cable with a drill. Check for a damaged or malfunctioning speed sensor. Gauge must be recalibrated (see instructions).
PLEASE – SET – SPEED	Speedometer not calibrated	Gauge must be calibrated to your vehicle (see instructions)
Speed reading is erratic or jumps around.	Speed sensor wire is loose or broken. Cable is loose or broken. Poor ground connection. Ignition Interference	Check all wire connections and inspect wire for breaks. Check cable between sensor and transmission. Check ground connection on speedometer and sensor. Check for tachometer wires routed with VSS signal wires. Check for VSS signal wires routed near ignition coils Check for poor ignition system ground Use suppression spark plug wires
Speed reading is incorrect.	Gauge is not calibrated correctly.	Gauge must be calibrated (see instructions).
Gauge lights up, but tach will only show zero.	Yellow wire is not connected properly. Ignition system not grounded properly. Gauge is not grounded properly. Tach signal type is not set correctly. Gauge is not calibrated	Check connection from yellow wire to tach signal wire. Check engine and ignition system grounds. Check gauge and engine grounds. Change the tach signal type (see instructions). Gauge must be recalibrated (see instructions).
Tach reading is erratic or jumps around.	Tach signal wire is loose or broken. Poor ground connection.	Check all wire connections and inspect wire for breaks. Check ground connection on tachometer, engine, and ignition system.
	Update rate is too fast.	Reset display update speed slower.
Tach reading is incorrect.	Gauge is not calibrated correctly.	Gauge must be calibrated (see instructions).
Gauge will not dim.	Blue wire is not connected correctly.	Check wiring connections. Blue wire should have 12 volts with headlights on.
Gauge remains dim at all times.	Blue wire is getting power all of the time.	Connect blue wire to location that only has power only when the headlights are on.
High beam, Left turn, or Right turn indicator does not work.	Loose or incorrect connection to indicator wire.	Check that the appropriate indicator wire has about 0 volts when the indicator should be off and about 12 volts when the indicator should be on.
Neutral, low oil, or engine indicator does not work.	Loose or incorrect connection to indicator wire.	Check that the appropriate indicator wire has about 12 volts when the indicator should be off and about 0 volts when the indicator should be on.

Speed sensor voltage checks. All checks should be made with the sensor connected to the gauge and the key on. Checks should be done with a voltmeter and not a test light. Checks for the 3-wire sensor should be made between each individual wire and ground.

3-wire sensor: Red wire should have 9-11 volts dc, slightly less than battery voltage, (sometimes +5V if supplied by factory harness)
Black wire should show ground, 0 volts dc at all times.
White wire should vary between 0 and 5 volts dc as the gear teeth, or a steel object passes by the sensor.
Aluminum and Stainless Steel will not work with a Hall-effect sensor. This can be checked with the sensor mounted and spinning the rear tire slowly, or by removing the sensor and moving a steel object pass the face of the sensor.

2-wire sensor: Measure the voltage between the two sensor wires. With the wheel spinning the voltage should be about 1-10 volts ac (make sure the meter is set to AC volts and not DC volts for this check).

SERVICE AND REPAIR

DAKOTA DIGITAL offers complete service and repair of its product line. In addition, technical consultation is available to help you work through any questions or problems you may be having installing one of our products. Please read through the Troubleshooting Guide. There, you will find the solution to most problems.
Should you ever need to send the unit back for repairs, please call our technical support line, (605) 332-6513, to request a Return Merchandise Authorization number. Package the product in a good quality box along with plenty of packing material. Ship the product by UPS or insured Parcel Post. Be sure to include the RMA number on the package, and include a complete description of the problem with RMA number, your full name and address (street address preferred), and a telephone number where you can be reached during the day. Any returns for warranty work must include a copy of the dated sales receipt from your place of purchase. Send no money. We will bill you after repair.

Dakota Digital 24 Month Warranty

DAKOTA DIGITAL warrants to the ORIGINAL PURCHASER of this product that should it, under normal use and condition, be proven defective in material or workmanship within 24 MONTHS FROM THE DATE OF PURCHASE, such defect(s) will be repaired or replaced at Dakota Digital's option.
This warranty does not cover nor extend to damage to the vehicle's systems, and does not cover removal or reinstallation of the product. This Warranty does not apply to any product or part thereof which in the opinion of the Company has been damaged through alteration, improper installation, mishandling, misuse, neglect, or accident.
This Warranty is in lieu of all other expressed warranties or liabilities. Any implied warranties, including any implied warranty of merchantability, shall be limited to the duration of this written warranty. Any action for breach of any warranty hereunder, including any implied warranty of merchantability, must be brought within a period of 24 months from date of original purchase. No person or representative is authorized to assume, for Dakota Digital, any liability other than expressed herein in connection with the sale of this product.

Dakota Digital

4510 W. 61ST St. N., Sioux Falls, SD 57107
Phone: (605) 332-6513 FAX: (605) 339-4106
www.dakotadigital.com
dakotasupport@dakotadigital.com

MAN# 650088B